

# Digital Fiber Sensor FX-100 SERIES

Related Information

- General terms and conditions..... F-17
- Sensor selection guide..... P.3~
- Glossary of terms / General precautions..... P.1359~ / P.1405
- Fiber selection..... P.5~



[panasonic-electric-works.net/sunx](http://panasonic-electric-works.net/sunx)



FX-100 series has been modified from July 2011 production. The color of enclosure has been changed from white to dark gray and the protection cover has been attached.

- PNP output type available
- Timer
- Interference prevention
- Light intensity monitor
- Automatic sensitivity setting
- Test input

## Taking fiber sensors to the next level


### Setup is made simple, using a dual digital display

The dual digital display allows users to check both the threshold value and incident light intensity at the same time, allowing for clear and intuitive control of the sensor's functions.




### Commercially-available connectors are used so that lead time and spare part numbers can both be reduced

The connectors used are commercially-available connectors, so that processing costs and lead time required for carrying out processing after purchase of the sensors can be greatly reduced. The same connection parts as the DP-100 series of digital pressure sensors and the PM-64 series of micro photoelectric sensors can be used.

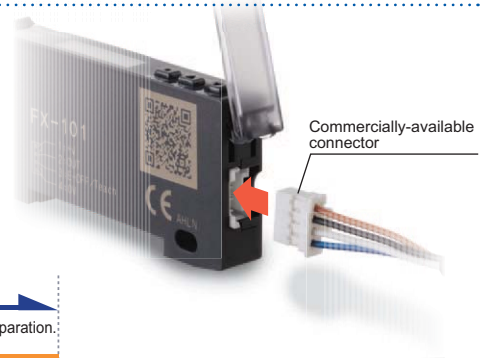

Commercially-available press-fit connectors are used, so that the processing costs for connection cables can be greatly reduced.

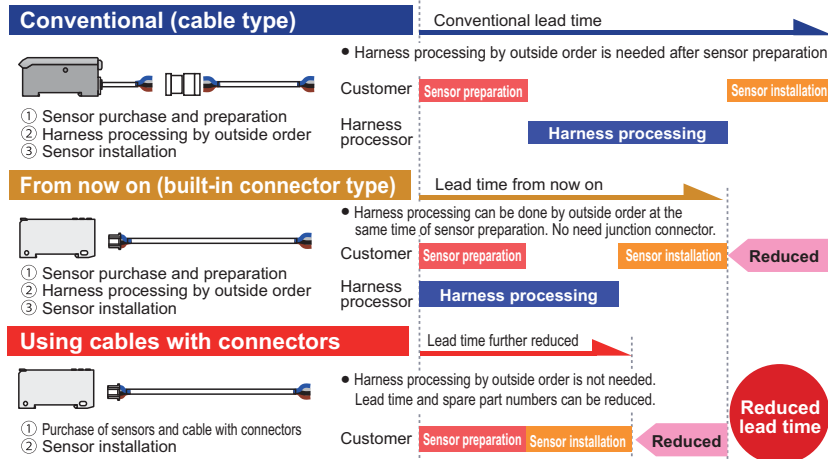

**Reduced lead time**

- FIBER SENSORS
- LASER SENSORS
- PHOTOELECTRIC SENSORS
- MICRO PHOTOELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC CONTROL DEVICES
- ENDOSCOPE
- LASER MARKERS
- PLC / TERMINALS
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS
- Selection Guide
- Fibers
- Amplifiers
- FX-500
- FX-100
- FX-300
- FX-410
- FX-311
- FX-301-F7/ FX-301-F


### Saving-space with a width of 9 mm 0.354 in

Very slim at only 9 mm 0.354 in. This is much thinner than existing fiber sensors. Even if the difference is small when only using one unit, when using many units this makes a very large difference.




### Improved stability over both long terms

Utilizes the standard Panasonic Electric Works SUNX digital fiber sensor element "Four-chemical emitting element" for light emission. The light emission is guaranteed to be stable over long periods of time.

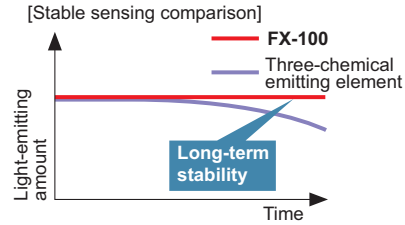

### Simple operation due to clear operation system

We are using the operation system of digital pressure sensor **DP-100**, which has been highly praised since it went on sale. We have separated the settings levels into three levels: RUN mode, SET mode, and PRO mode, making operation simpler and easier.

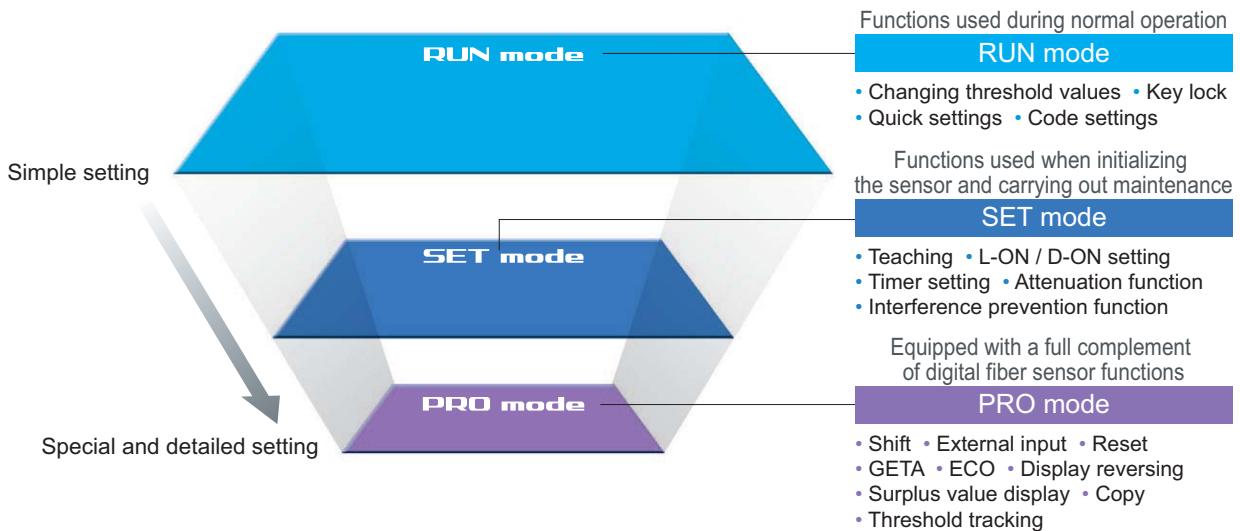

### Quick code input function

Simply inputting the default setting "Code (number)" will enable sensor settings. Even if the settings are accidentally changed, inputting the code will restore the default settings. Confirmation can be carried out smoothly via telephone by simply quoting numbers. This can be of great assistance when dealing with foreign country customers.



**RUN mode**



Quick setting: Press and simultaneously for 2 sec.

Code setting: Press and simultaneously for 4 sec.

#### Quick setting numbers (summary)

No	Output operation	Timer	Light-emitting amount selection
-00-	Dark-ON	None	OFF
-01-	Dark-ON	None	ON
-02-	Dark-ON	OFF-delay 10 ms	OFF
-03-	Dark-ON	OFF-delay 10 ms	ON
-10-	Light-ON	ON-delay 40 ms	ON
-11-	Light-ON	ON-delay 40 ms	OFF
-12-	Light-ON	ON-delay 10 ms	ON
-13-	Light-ON	ON-delay 10 ms	OFF

Refer to "Quick setting function" and "Code setting function" in "PRECAUTIONS FOR PROPER USE" for details.

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Fibers

Amplifiers

**FX-500**

**FX-100**

**FX-300**

**FX-410**

**FX-311**

**FX-301-F7/  
FX-301-F**


- FIBER SENSORS
- LASER SENSORS
- PHOTOELECTRIC SENSORS
- MICRO PHOTOELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC CONTROL DEVICES
- ENDOSCOPE
- LASER MARKERS
- PLC / TERMINALS
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS

**Teaching using ON / OFF buttons** SET mode


Simply press the ON button when an object is present and OFF when it is not. There is no need to switch settings or make judgments between Light-ON (l.on) and Dark-ON (d.on).

**<Setting example>**

Thru-beam type / Retroreflective type

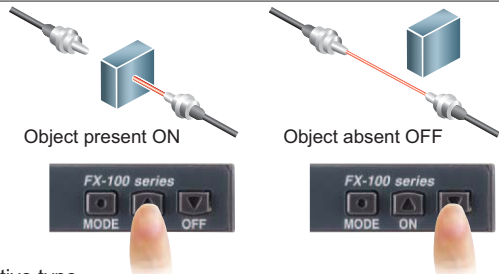

Reflective type

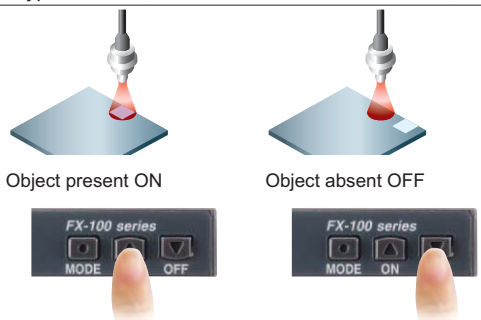

**Teaching is possible even without work.**


**Limit teaching function**

This carries out teaching and sets threshold values only when no object is present (when the incident light amount is stable). This is useful when sensing objects if there are other objects in the background and when sensing minute objects. Teaching can also be carried out using external input.

**Save maintenance time**  
**Threshold tracking function** PRO mode

This function seeks changes in the light emitting amount resulting from changes in the environment over long periods (such as dust levels), so that the incident light intensity can be checked at desired intervals and the threshold values can be reset automatically. Reduces the number of man-hours needed for maintenance.

\* Becomes active when the output operation is set to on, the beams are not received, and when using semi-transparent or mirrored reflective cable.

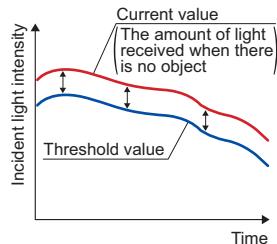

**Resolves variation in incident light intensity display**  
**GETA function** PRO mode

Even when performing the same sensing operation, there may be variances in the digital values of the fiber amp. There is no problem with the sensor itself, but the operator may find it troubling. Given value can be corrected with the GETA function, so the apparent variation can be eliminated and the creation of operation manuals can proceed smoothly.


**Variations in the amount of light received**



Unify at 500 using the GETA function




**Correcting an incident light intensity display of '500' to display as '1000'**

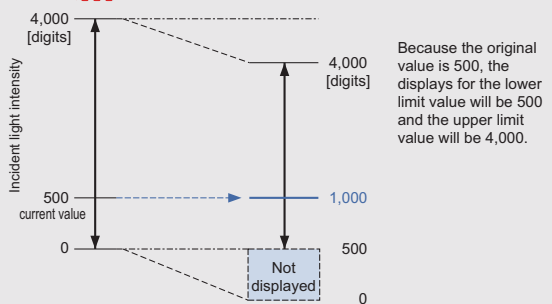


**Stable detection of minute objects or transparent objects**  
**Attenuation function** SET mode

If the light receiving level becomes saturated when sensing over short distances or when sensing transparent objects or minute objects, the light emitting amount can be reduced so that stable sensing can be provided without needing to change the response time. On previous models, there was only one light reduction level, but now there are 3 levels plus an automatic mode. As before, even when the fiber and distance settings needed to be altered for proper sensing, this function can allow simple settings alterations.

**【Light receiving level saturated】**

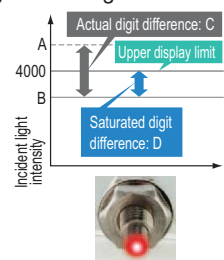

**【Stable sensing】**

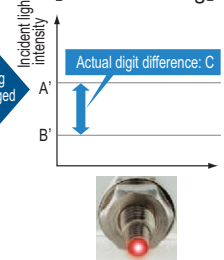


### Interference prevention function SET mode

**FX-101**: Interference prevention for up to 3 units  
**FX-102**: Interference prevention for up to 4 units


The emission frequencies can be set separately for each unit in order to avoid interference. The emitted light flashes while setting is in progress, so that you can see at a glance which fiber sensor is currently being set. There is no need to place the amplifiers close together like there was before, and so the amplifiers can be set up apart from each other.

\* When the emission frequencies are changed, the response times will also change.

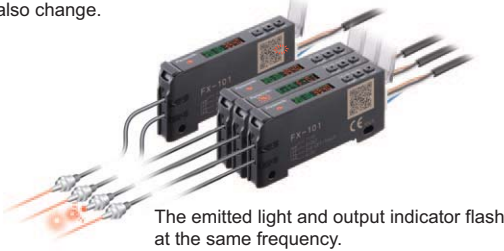

### Multi-function external input PRO mode


Settings such as emission halt, limit / auto teaching, 2-point teaching and ECO settings can be carried out via external input. Also, the threshold value can be memorized.

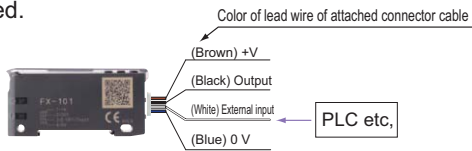

External input lines are equipped as standard

### Digital display inversion setting PRO mode

The viewing orientation of the digital display can be inverted in accordance with the setting direction of the amplifier.

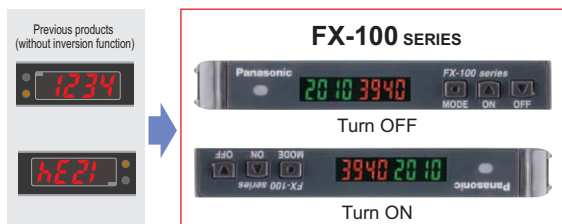


### Alert function PRO mode

When the amount light received approaches the threshold value, the display can be made to blink in order to alert the operator.

**<When using at a shift amount of 20% and a threshold value of 1,000>**


The amount of light received ranges from about 900 to 1,100 when the digital indicator flashes.

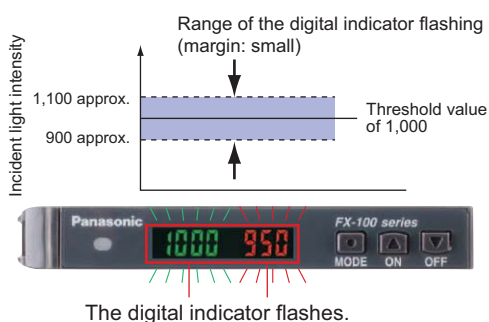

The digital indicator flashes.

### Setting copy function to reduce man-hours and human error PRO mode

By attaching a fiber sensor to each device that is to be the fiber sensor master, the master sensor settings can be copied along with data transmissions. By synchronizing the settings on all the devices, trouble from setting errors can be prevented, meaning fewer changes to the instruction manuals even when equipment design is changed.

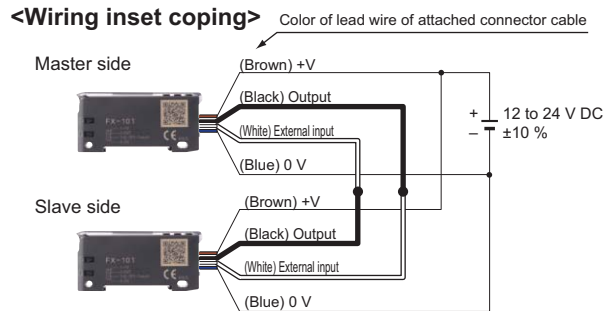

### Copiable setting

Threshold value, output operation setting, timer operation setting, timer period setting, light-emitting amount selection setting (attenuation function), shift setting, ECO setting, digital display inversion setting, and threshold value margin setting (alert function)

### Flexible mounting without bracket

You can choose either DIN rail mounting or mounting with M3 screws through penetrating holes on the side of the amplifier. When mounting directly or installing only one amplifier or installing to a moving part, there is no slippage.



### Use normal or long distance varieties

Response time and sensing range differ with standard or long sensing range types. Select the best type for your needs.

Model No.	Type	Sensing range (FT-B8)	Response time
<b>FX-101</b>	Standard type	400 mm <b>15.748 in</b>	Fastest 250 μs
<b>FX-102</b>	Long sensing range type	1,150 mm <b>45.276 in</b>	Fastest 2.5 ms

### Electricity consumption saving possibilities ECO

After setting, if about 20 seconds go by without any key operations taking place the digital display will turn off and energy consumption is kept under 600 mW. (When illuminated it is under 720 mW)

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Fibers

Amplifiers

**FX-500**

**FX-100**

**FX-300**


**FX-410**

**FX-311**

**FX-301-F7/ FX-301-F**

**ORDER GUIDE**


**Amplifiers**

Type	Appearance	Model No.	Emitting element	Output
Standard type		FX-101 (Note 2)	Red LED	NPN open-collector transistor
		FX-101-Z (Note 3)		NPN open-collector transistor
		FX-101P (Note 2)		PNP open-collector transistor
		FX-101P-Z (Note 3)		PNP open-collector transistor
		FX-101-CC2		NPN open-collector transistor
		FX-101P-CC2		PNP open-collector transistor
		FX-102 (Note 2)		NPN open-collector transistor
		FX-102-Z (Note 3)		NPN open-collector transistor
		FX-102P (Note 2)		PNP open-collector transistor
Long sensing range type		FX-102P-Z (Note 3)	PNP open-collector transistor	
		FX-102-CC2	NPN open-collector transistor	
		FX-102P-CC2	PNP open-collector transistor	

Notes: 1) The connector attached cable **CN-14A-C2** is supplied with the amplifier.  
 2) Make sure to use the optional connector attached cable **CN-14A(-R)-C** or the connector **CN-14A**, or a connector manufactured by J.S.T. Mfg. Co., Ltd. (contact: SPHD-001T-P0.5, housing: PAP-04V-S)  
 3) Make sure to use the optional M8 connector attached cable **CN-24A-C**.

**Accessory**

- **CN-14A-C2**  
 (Connector attached) cable 2 m 6.562 ft  
 \* Only include cable set type
- **FC-FX-1** (Protection cover)

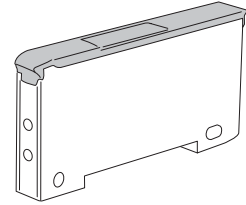

**OPTIONS**

Designation	Model No.	Description	
Connector attached cable	CN-14A-C1	1 m 3.281 ft	0.02 mm <sup>2</sup> 4-core cable with connector on one end Cable outer diameter: $\phi$ 3.7 mm $\phi$ 0.146 in
	CN-14A-C2 (Note 1)	2 m 6.562 ft	
	CN-14A-C3	3 m 9.843 ft	
	CN-14A-C5	5 m 16.404 ft	
Connector attached cable (Flexible type)	CN-14A-R-C1	1 m 3.281 ft	For M8 plug-in connector type The connector on one end Cable outer diameter: $\phi$ 4 mm $\phi$ 0.157 in
	CN-14A-R-C2	2 m 6.562 ft	
	CN-14A-R-C3	3 m 9.843 ft	
	CN-14A-R-C5	5 m 16.404 ft	
M8 connector attached cable	CN-24A-C2	2 m 6.562 ft	
	CN-24A-C5	5 m 16.404 ft	
Connector	CN-14A	Set of 10 housings and 40 contacts	
Amplifier mounting bracket	MS-DIN-4	Mounting bracket for amplifier	
End plates	MS-DIN-E	When it moves depending on the way it is installed on a DIN rail, these end plates ensure that all amplifiers are mounted together in a secure and fully connected manner.	
	Two pcs. per set		
Copy unit (Note 2)	SC-SU1	Copy the controller settings to other controllers.	

Notes: 1) The connector attached cable **CN-14A-C2** is supplied with the cable set type **FX-10-C2**.  
 2) Refer to the copy unit **SC-SU1** pages for details.


**Recommended connector**

Contact: SPHD-001T-P0.5, Housing: PAP-04V-S (Manufactured by J.S.T. Mfg. Co., Ltd.)  
 Note: Contact the manufacturer for details of the recommended products.


**Recommended crimping tool**

Model No.: YC-610R (Manufactured by J.S.T. Mfg. Co., Ltd.)  
 Note: Contact the manufacturer for details of the recommended products.


**M8 connector attached cable**

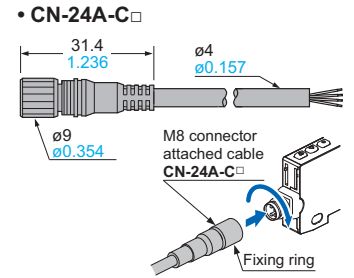


**Amplifier mounting bracket**

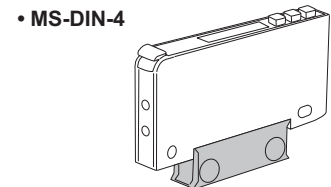

**Connector attached cable**

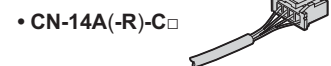

**Connector**

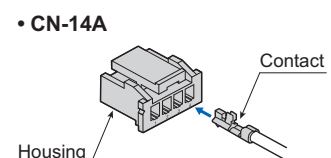



















- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC CONTROL DEVICES
- ENDOSCOPE
- LASER MARKERS
- PLC / TERMINALS
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS
- Selection Guide
- Fibers
- Amplifiers
- FX-500
- FX-100
- FX-300
- FX-410
- FX-311
- FX-301-F7/ FX-301-F

## LIST OF FIBERS

### Thru-beam type (one pair set)

Fibers are listed in alphabetic order. Refer to p.5~ "Fiber Selection" for details of each fiber.

Model No.	Sensing range (mm in) (Note 1)		Type	Fiber cable length  Free-cut	Dimensions	
	Standard type <b>FX-101</b> □	Long sensing range type <b>FX-102</b> □				
<b>FT-30</b>	135 <b>5.315</b>	400 <b>15.748</b>	Super quality, $\phi 0.5$ mm $\phi 0.020$ in, Flexible	2 m <b>6.562</b> ft	P.90	
<b>FT-31</b>	130 <b>5.118</b>	340 <b>13.386</b>	M3, Flexible	 2 m <b>6.562</b> ft	P.90	
<b>FT-40</b>	320 <b>12.598</b>	870 <b>34.252</b>	Super quality, $\phi 1$ mm $\phi 0.039$ in, Flexible	2 m <b>6.562</b> ft	P.90	
<b>FT-41</b>	300 <b>11.811</b>	800 <b>31.496</b>	Metal-free	 2 m <b>6.562</b> ft	P.90	
<b>FT-42</b>	300 <b>11.811</b>	800 <b>31.496</b>	M4, Flexible		P.90	
<b>FT-A8</b>	1,500 <b>59.055</b>	3,500 <b>137.795</b> (Note 2)	Wide beam		P.90	
<b>FT-A30</b>	3,500 <b>137.795</b> (Note 2)	3,500 <b>137.795</b> (Note 2)			P.90	
<b>FT-AFM2</b>	280 <b>11.024</b>	720 <b>28.346</b>	Array		P.90	
<b>FT-AFM2E</b>	240 <b>9.449</b>	670 <b>26.378</b>			P.90	
<b>FT-B8</b>	400 <b>15.748</b>	1,150 <b>45.276</b>	M4		P.90	
<b>FT-E12</b>	6 <b>0.236</b>	19 <b>0.748</b>	Ultra-small dia.		500 mm <b>19.685</b> in	P.91
<b>FT-E13</b>	6 <b>0.236</b>	19 <b>0.748</b>	Ultra-small dia., Flexible		 1 m <b>3.281</b> ft	P.91
<b>FT-E22</b>	15 <b>0.591</b>	60 <b>2.362</b>	Ultra-small dia.		1 m <b>3.281</b> ft	P.91
<b>FT-E23</b>	22 <b>0.866</b>	80 <b>3.150</b>	Ultra-small dia., Flexible	 1 m <b>3.281</b> ft	P.91	
<b>FT-FM2</b>	300 <b>11.811</b>	800 <b>31.496</b>	M4	 2 m <b>6.562</b> ft	P.91	
<b>FT-FM2S</b>	300 <b>11.811</b>	800 <b>31.496</b>	M4, Sleeve		P.91	
<b>FT-FM2S4</b>	300 <b>11.811</b>	800 <b>31.496</b>			P.91	
<b>FT-FM10L</b>	9,300 <b>366.142</b>	15,000 <b>590.551</b>	M14, Long sensing range	 10 m <b>32.81</b> ft	P.91	
<b>FT-H13-FM2</b>	250 <b>9.843</b>	700 <b>27.559</b>	Heat-resistant, 130 °C 266 °F	 2 m <b>6.562</b> ft	P.91	
<b>FT-H20-J20-S</b> (Note 3)	135 <b>5.315</b>	420 <b>16.535</b>	Heat-resistant, Joint 200 °C 392 °F	 200 mm <b>7.874</b> in (Note 4)	P.92	
<b>FT-H20-J30-S</b> (Note 3)	135 <b>5.315</b>	420 <b>16.535</b>		 300 mm <b>11.811</b> in (Note 4)	P.92	
<b>FT-H20-J50-S</b> (Note 3)	135 <b>5.315</b>	420 <b>16.535</b>		 500 mm <b>19.685</b> in (Note 4)	P.92	
<b>FT-H20-M1</b>	210 <b>8.268</b>	540 <b>21.260</b>	Heat-resistant, 200 °C 392 °F	1 m <b>3.281</b> ft	P.92	
<b>FT-H20-VJ50-S</b> (Note 3)	150 <b>5.906</b>	500 <b>19.685</b>	Heat-resistant, Joint 200 °C 392 °F Side-view	 500 mm <b>19.685</b> in (Note 4)	P.92	
<b>FT-H20-VJ80-S</b> (Note 3)	150 <b>5.906</b>	500 <b>19.685</b>		 800 mm <b>31.496</b> in (Note 4)	P.92	
<b>FT-H20W-M1</b>	100 <b>3.937</b>	300 <b>11.811</b>	Heat-resistant, 200 °C 392 °F	1 m <b>3.281</b> ft	P.92	
<b>FT-H30-M1V-S</b> (Note 5)	110 <b>4.331</b>	280 <b>11.024</b>	Vacuum-resistant, Heat-resistant		P.92	
<b>FT-H35-M2</b>	170 <b>6.693</b>	490 <b>19.291</b>	Heat-resistant, 350 °C 662 °F Sleeve	2 m <b>6.562</b> ft	P.92	
<b>FT-H35-M2S6</b>	170 <b>6.693</b>	490 <b>19.291</b>		P.92		
<b>FT-HL80Y</b>	990 <b>38.976</b>	2,340 <b>92.126</b>	Chemical-resistant, Heat-resistant	 2 m <b>6.562</b> ft (Note 6)	P.92	
<b>FT-K8</b>	1,000 <b>39.370</b>	3,000 <b>118.110</b>	Narrow beam Side-view	 2 m <b>6.562</b> ft	P.93	
<b>FT-KV1</b>	135 <b>5.315</b>	500 <b>19.685</b>			P.93	
<b>FT-KV8</b>	1,000 <b>39.370</b>	3,000 <b>118.110</b>			P.93	
<b>FT-L80Y</b>	1,100 <b>43.307</b>	2,600 <b>102.362</b>	Chemical-resistant	 2 m <b>6.562</b> ft (Note 6)	P.93	
<b>FT-NFM2</b>	130 <b>5.118</b>	280 <b>11.024</b>	M3	 2 m <b>6.562</b> ft	P.93	
<b>FT-NFM2S</b>	130 <b>5.118</b>	280 <b>11.024</b>	M3, Sleeve		P.93	
<b>FT-NFM2S4</b>	130 <b>5.118</b>	280 <b>11.024</b>			P.93	
<b>FT-P2</b>	120 <b>4.724</b>	330 <b>12.992</b>	$\phi 1.5$ mm $\phi 0.059$ in, Flexible	1 m <b>3.281</b> ft	P.93	
<b>FT-P40</b>	80 <b>3.150</b>	240 <b>9.449</b>	M3, Flexible	 2 m <b>6.562</b> ft	P.93	
<b>FT-P60</b>	130 <b>5.118</b>	300 <b>11.811</b>	M4, Flexible		P.93	
<b>FT-P80</b>	230 <b>9.055</b>	650 <b>25.591</b>			P.93	
<b>FT-P81X</b>	260 <b>10.236</b>	800 <b>31.496</b>	M4, Tough flexible	1 m <b>3.281</b> ft	P.94	

- Notes: 1) Note that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.  
 2) The fiber cable length practically limits the sensing range to 3,500 mm **137.795** in long.  
 3) Heat-resistant joint fibers and ordinary-temperature fibers (**FT-FM2**) are sold as a set.  
 4) This is the fiber length (fixed length) for heat-resistant fibers. The ordinary-temperature fibers are free-cut to 2 m **6.562** ft.  
 5) Sold as a set comprising vacuum type fiber + photo-terminal (**FV-BR1**) + fiber at atmospheric side (**FT-J8**).  
 6) The allowable cutting range is 500 mm **19.685** in from the end of the fiber inserted.

FIBER  
SENSORSLASER  
SENSORSPHOTO-  
ELECTRIC  
SENSORSMICRO  
PHOTO-  
ELECTRIC  
SENSORSAREA  
SENSORSLIGHT  
CURTAINSPRESSURE /  
FLOW  
SENSORSINDUCTIVE  
PROXIMITY  
SENSORSPARTICULAR  
USE  
SENSORSSENSOR  
OPTIONSSIMPLE  
WIRE-SAVING  
UNITSWIRE-SAVING  
SYSTEMSMEASURE-  
MENT  
SENSORSSTATIC  
CONTROL  
DEVICES

ENDOSCOPE

LASER  
MARKERSPLC /  
TERMINALSHUMAN  
MACHINE  
INTERFACESENERGY  
CONSUMPTION  
VISUALIZATION  
COMPONENTSFA  
COMPONENTSMACHINE  
VISION  
SYSTEMSUV  
CURING  
SYSTEMSSelection  
Guide


Fibers

Amplifiers

**FX-500****FX-100****FX-300****FX-410****FX-311**FX-301-F/  
FX-301-F

## LIST OF FIBERS

### Thru-beam type (one pair set)

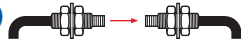

Fibers are listed in alphabetic order. Refer to p.5~ "Fiber Selection" for details of each fiber.

Model No.	Sensing range (mm in) (Note 1)		Type	Fiber cable length ✂️: Free-cut	Dimensions
	Standard type <b>FX-101</b> □	Long sensing range type <b>FX-102</b> □			
<b>FT-PS1</b>	40 1.575	90 3.543	ø1 mm ø0.039 in, Flexible	500 mm 19.685 in	P.93
<b>FT-R80</b>	180 7.087	430 16.929	M4, Elbow	✂️ 2 m 6.562 ft	P.94
<b>FT-S20</b>	135 5.315	400 15.748	Super quality, ø0.5 mm ø0.020 in, Flexible	2 m 6.562 ft	P.94
<b>FT-S21</b>	130 5.118	340 13.386	ø1.5 mm ø0.059 in, Flexible	✂️ 2 m 6.562 ft	P.94
<b>FT-S30</b>	320 12.598	870 34.252	Super quality, ø1 mm ø0.039 in, Flexible	2 m 6.562 ft	P.94
<b>FT-SFM2</b>	300 11.811	800 31.496	ø2.5 mm ø0.098 in	✂️ 2 m 6.562 ft	P.94
<b>FT-SFM2L</b>	760 29.921	2,400 94.488	ø2.5 mm ø0.098 in, Long sensing range		P.94
<b>FT-SFM2SV2</b>	180 7.087	470 18.504	Side-view		P.94
<b>FT-SNFM2</b>	130 5.118	280 11.024	ø1.5 mm ø0.059 in		P.95
<b>FT-T80</b>	300 11.811	800 31.496	M3		P.95
<b>FT-V10</b>	1,000 39.370	2,350 92.520	Side-view	✂️ 2 m 6.562 ft	P.95
<b>FT-V22</b>	140 5.512	380 14.961		1 m 3.281 ft	P.95
<b>FT-V41</b>	40 1.575	120 4.724		✂️ 2 m 6.562 ft	P.95
<b>FT-V80Y</b>	340 13.386	800 31.496	Chemical-resistant, Side-view	✂️ 2 m 6.562 ft (Note 3)	P.95
<b>FT-W4</b>	80 3.150	220 8.661	M3, Sharp bending	✂️ 2 m 6.562 ft	P.95
<b>FT-W8</b>	260 10.236	650 25.591	M4, Sharp bending		P.95
<b>FT-WA8</b>	1,500 59.055	3,500 137.795 (Note 2)	Wide beam		P.95
<b>FT-WA30</b>	3,500 137.795 (Note 2)	3,500 137.795 (Note 2)			P.95
<b>FT-WKV8</b>	700 27.559	2,200 86.614	Narrow beam, Sharp bending		P.96
<b>FT-WR80</b>	215 8.465	570 22.441	M4, Square head, Sharp bending		P.96
<b>FT-WR80L</b>	430 16.929	1,150 45.276			P.96
<b>FT-WS3</b>	150 5.906	600 23.622	ø3 mm ø0.118 in, Sharp bending		P.96
<b>FT-WS4</b>	80 3.150	220 8.661	ø1.5 mm ø0.059 in, Sharp bending		P.96
<b>FT-WS8</b>	260 10.236	650 25.591	ø2.5 mm ø0.098 in, Sharp bending		P.96
<b>FT-WS8L</b>	600 23.622	1,500 59.055	ø3 mm ø0.118 in, Sharp bending	P.96	
<b>FT-WV42</b>	30 1.181	80 3.150	Side-view, Sharp bending	P.96	
<b>FT-WZ4</b>	230 9.055	670 26.378	Rectangular, Compact, Sharp bending	✂️ 1 m 3.281 ft	P.96
<b>FT-WZ4HB</b>	80 3.150	230 9.055		P.97	
<b>FT-WZ7</b>	330 12.992	1,000 39.370		P.97	
<b>FT-WZ7HB</b>	190 7.480	580 22.835		P.97	
<b>FT-WZ8</b>	330 12.992	950 37.402		P.97	
<b>FT-WZ8E</b>	700 27.559	2,100 82.677		P.97	
<b>FT-WZ8H</b>	1,200 47.244	2,800 110.236		✂️ 2 m 6.562 ft	P.97
<b>FT-Z8</b>	360 14.173	1,000 39.370		Rectangular, Flexible	P.97
<b>FT-Z8E</b>	800 31.496	1,850 72.835	P.97		
<b>FT-Z8H</b>	1,400 55.118	3,100 122.047	P.97		
<b>FT-Z802Y</b>	520 20.472	3,100 122.047	Chemical-resistant, Rectangular		P.97

Notes: 1) Note that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.



2) The fiber cable length practically limits the sensing range to 3,500 mm 137.795 in long.

3) The allowable cutting range is 500 mm 19.685 in from the end that the amplifier inserted.

**LIST OF FIBERS**

**Retroreflective type** 









Fibers are listed in alphabetic order. Refer to p.5~ "Fiber Selection" for details of each fiber.

Model No.	Sensing range (mm in) (Note 1) (Note 2)		Type	Fiber cable length  Free-cut	Dimensions
	Standard type <b>FX-101</b> □	Long sensing range type <b>FX-102</b> □			
<b>FR-KV1</b>	15 to 200 <b>0.591 to 7.874</b>	15 to 360 <b>0.591 to 14.173</b>	Wafer mapping	 2 m <b>6.562 in</b>	P.98
<b>FR-KZ21</b>	20 to 200 <b>0.787 to 7.874</b>	20 to 200 <b>0.787 to 7.874</b>	Narrow beam, Top sensing		P.98
<b>FR-KZ21E</b>	20 to 200 <b>0.787 to 7.874</b>	20 to 200 <b>0.787 to 7.874</b>	Narrow beam, Side sensing		P.98
<b>FR-WKZ11</b>	100 to 550 <b>3.937 to 21.654</b>	100 to 830 <b>3.937 to 32.677</b>	Sharp bending		P.98

- Notes: 1) Note that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut. The sensing range of **FR-WKZ11** is specified for the **RF-13**. The sensing range of **FR-KZ21**, **FR-KZ21E** is specified for the attached reflector **RF-003**. The sensing range of **FR-KV1** is specified for the attached reflector. Refer to p.166 for sensing range when **FR-WKZ11** is used in combination with a reflector (optional).
- 2) The sensing range of retroreflective type is the possible setting range for the attached reflector. The fiber can detect an object less than setting range for the reflector. However, note that if there are any white or highly-reflective surfaces near the fiber head, reflected incident light may affect the fiber head. If this occurs, adjust the threshold value of the amplifier unit before use.

**Reflective type** 

Fibers are listed in alphabetic order. Refer to p.5~ "Fiber Selection" for details of each fiber.

Model No.	Sensing range (mm in) (Note 1) (Note 2)		Type	Fiber cable length  Free-cut	Dimensions
	Standard type <b>FX-101</b> □	Long sensing range type <b>FX-102</b> □			
<b>FD-30</b>	45 <b>1.772</b>	155 <b>6.102</b>	Super quality, M3, Flexible	2 m <b>6.562 ft</b>	P.99
<b>FD-31</b>	35 <b>1.378</b>	140 <b>5.512</b>	M3, Flexible	 2 m <b>6.562 ft</b>	P.99
<b>FD-40</b>	45 <b>1.772</b>	155 <b>6.102</b>	Super quality, M4, Flexible	2 m <b>6.562 ft</b>	P.99
<b>FD-41</b>	35 <b>1.378</b>	140 <b>5.512</b>	M4, Flexible	 2 m <b>6.562 ft</b>	P.99
<b>FD-60</b>	140 <b>5.512</b>	420 <b>16.535</b>	Super quality, M6, Flexible	2 m <b>6.562 ft</b>	P.99
<b>FD-61</b>	120 <b>4.724</b>	410 <b>16.142</b>	M6, Flexible	 2 m <b>6.562 ft</b>	P.99
<b>FD-A15</b>	125 <b>4.921</b>	250 <b>9.843</b>	Wide beam		P.99
<b>FD-AFM2</b>	105 <b>4.134</b>	285 <b>11.220</b>	Array, Top sensing	 2 m <b>6.562 ft</b>	P.99
<b>FD-AFM2E</b>	85 <b>3.346</b>	245 <b>9.646</b>	Array, Side sensing		P.99
<b>FD-B8</b>	170 <b>6.693</b>	440 <b>17.323</b>	M6	1 m <b>3.281 ft</b>	P.99
<b>FD-E12</b>	3.5 <b>0.138</b>	13 <b>0.512</b>	Ultra-small dia.		P.100
<b>FD-E22</b>	16 <b>0.630</b>	45 <b>1.772</b>	M3, High precision	500 mm <b>19.685 in</b>	P.100
<b>FD-EG1</b>	18 <b>0.709</b>	50 <b>1.969</b>			P.100
<b>FD-EG2</b>	10 <b>0.394</b>	30 <b>1.181</b>			P.100
<b>FD-EG3</b>	7 <b>0.276</b>	22 <b>0.866</b>	M3, Sleeve	1 m <b>3.281 ft</b>	P.100
<b>FD-EN500S1</b>	1 <b>0.039</b>	4 <b>0.157</b>			P.100
<b>FD-ENM1S1</b>	15 <b>0.591</b>	48 <b>1.890</b>	Liquid sensing, Mountable on pipe	 2 m <b>6.562 ft</b>	P.100
<b>FD-F4</b>	Applicable pipe diameter: Outer dia. $\phi 6$ to $\phi 26$ mm <b><math>\phi 0.236</math> to <math>\phi 1.024</math> in</b> transparent pipe (PFA (fluorine resin) or equivalently transparent pipe, wall thickness 1 mm <b>0.039 in</b> )				P.100
<b>FD-F41</b>	Applicable pipe diameter: Outer dia. $\phi 6$ to $\phi 26$ mm <b><math>\phi 0.236</math> to <math>\phi 1.024</math> in</b> transparent pipe (PVC (vinyl chloride), fluorine resin, polycarbonate, acrylic, glass, wall thickness 1 to 3 mm <b>0.039 to 0.118 in</b> )		P.100		
<b>FD-F41Y</b>	$\phi 4$ mm <b><math>\phi 0.157</math> in</b> Protective tube: Fluorine resin, length 500 mm <b>19.685 in</b> (cuttable) Liquid surface not contacted: Beam received, Liquid surface contacted: Beam interrupted		Liquid/Liquid leak sensing	P.101	
<b>FD-F8Y</b>			Liquid sensing	 2 m <b>6.562 ft</b> (Note 3)	P.101
<b>FD-FA90</b>	Applicable pipe diameter: Outer dia. $\phi 8$ mm <b><math>\phi 0.315</math> in</b> or more transparent pipe (When used with the tying bands: $\phi 8$ to $\phi 80$ mm <b><math>\phi 0.315</math> to <math>\phi 3.150</math> in</b> ) [PFA (fluorine resin), including translucent] Liquid absent: Beam received, Liquid present: Beam interrupted		Liquid/Liquid leak sensing	 2 m <b>6.562 ft</b>	P.101
<b>FD-FM2</b>	100 <b>3.937</b>	410 <b>16.142</b>	M6		P.101

- Notes: 1) The standard sensing objects of the sensing ranges vary depending on the fibers.  
 2) Note that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.  
 3) The allowable cutting range is 1,000 mm **39.370 in** from the end that the amplifier inserted.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Fibers

Amplifiers

**FX-500**

**FX-100**

**FX-300**

**FX-410**

**FX-311**

**FX-301-F7/ FX-301-F**



**LIST OF FIBERS**

**Reflective type**



Fibers are listed in alphabetic order. Refer to p.5~ "Fiber Selection" for details of each fiber.

Model No.	Sensing range (mm in) (Note 1) (Note 2)		Type	Fiber cable length ✂️: Free-cut	Dimensions
	Standard type <b>FX-101</b> □	Long sensing range type <b>FX-102</b> □			
<b>FD-FM2S</b>	100 <b>3.937</b>	345 <b>13.583</b>	M6, Sleeve	✂️ 2 m <b>6.562 ft</b>	P.101
<b>FD-FM2S4</b>	100 <b>3.937</b>	345 <b>13.583</b>			P.101
<b>FD-G4</b>	50 <b>1.969</b>	120 <b>4.724</b>	M4, High precision	✂️ 1 m <b>3.281 ft</b> (Note 3)	P.101
<b>FD-G6</b>	50 <b>1.969</b>	120 <b>4.724</b>	M3, High precision		P.102
<b>FD-G6X</b>	45 <b>1.772</b>	160 <b>6.299</b>	Tough flexible	✂️ 2 m <b>6.562 ft</b>	P.102
<b>FD-G40</b>	50 <b>1.969</b>	120 <b>4.724</b>	Metal-free		P.101
<b>FD-G60</b>	100 <b>3.937</b>	410 <b>16.142</b>	Heat-resistant, 130 °C <b>266 °F</b>	✂️ 2 m <b>6.562 ft</b>	P.102
<b>FD-H13-FM2</b>	100 <b>3.937</b>	280 <b>11.024</b>	Heat-resistant, 180 °C <b>356 °F</b>		P.102
<b>FD-H18-L31</b>	0 to 10 <b>0.000 to 0.394</b>	0 to 25 <b>0.000 to 0.984</b>	Heat-resistant, 180 °C <b>356 °F</b>	✂️ 1 m <b>3.281 ft</b>	P.102
<b>FD-H20-21</b>	90 <b>3.543</b>	280 <b>11.024</b>	Heat-resistant, 200 °C <b>392 °F</b>		P.102
<b>FD-H20-M1</b>	120 <b>4.724</b>	300 <b>11.811</b>	M4	✂️ 3 m <b>9.843 ft</b>	P.102
<b>FD-H25-L43</b>	4 to 16 <b>0.157 to 0.630</b>	4 to 23 <b>0.157 to 0.906</b>	M6		P.103
<b>FD-H25-L45</b>	7 to 35 <b>0.276 to 1.378</b>	7 to 38 <b>0.276 to 1.496</b>	Heat-resistant, Convergent reflective	✂️ 1 m <b>3.281 ft</b>	P.103
<b>FD-H30-KZ1V-S</b> (Note 4)	25 to 80 <b>0.984 to 3.150</b>	10 to 220 <b>0.394 to 8.661</b>	Vacuum-resistant, Heat-resistant		P.103
<b>FD-H30-L32</b>	2 to 9 <b>0.079 to 0.354</b>	0 to 17 <b>0.000 to 0.669</b>	Heat-resistant, 300 °C <b>572 °F</b>	✂️ 2 m <b>6.562 ft</b>	P.103
<b>FD-H30-L32V-S</b> (Note 4)	2.5 to 6.5 <b>0.098 to 0.256</b>	0 to 11 <b>0.000 to 0.433</b>	Vacuum-resistant, Convergent reflective		P.103
<b>FD-H35-20S</b>	85 <b>3.346</b>	200 <b>7.874</b>	M4, Sleeve	✂️ 1 m <b>3.281 ft</b>	P.104
<b>FD-H35-M2</b>	75 <b>2.953</b>	280 <b>11.024</b>	Heat-resistant, 350 °C <b>662 °F</b>		P.104
<b>FD-H35-M2S6</b>	75 <b>2.953</b>	280 <b>11.024</b>	M6, Sleeve	✂️ 2 m <b>6.562 ft</b>	P.104
<b>FD-HF40Y</b>	ø4 mm <b>ø0.157 in</b> Protective tube: Fluorine resin, length 500 mm <b>19.685 in</b> (cuttable) Liquid surface not contacted: Beam received, Liquid surface contacted: Beam interrupted		Liquid/Liquid leak sensing		✂️ 2 m <b>6.562 ft</b>
<b>FD-L4</b>	5 to 8 <b>0.197 to 0.315</b> (Convergent point 6 <b>0.236</b> )	1 to 17 <b>0.039 to 0.669</b> (Convergent point 6 <b>0.236</b> )	Convergent reflective	P.104	
<b>FD-L41</b>	3 to 14 <b>0.118 to 0.551</b> (Convergent point 8 <b>0.315</b> )	1.5 to 16 <b>0.059 to 0.630</b> (Convergent point 8 <b>0.315</b> )		P.104	
<b>FD-L43</b>	0 to 19 <b>0.000 to 0.748</b>	0 to 25 <b>0.000 to 0.984</b>		P.104	
<b>FD-L44</b>	0 to 6 <b>0.000 to 0.236</b>	0 to 8 <b>0.000 to 0.315</b>		P.104	
<b>FD-L44S</b>	0 to 4.5 <b>0.000 to 0.177</b>	0 to 5.5 <b>0.000 to 0.217</b>		P.104	
<b>FD-L45</b>	0 to 40 <b>0.000 to 1.575</b>	0 to 50 <b>0.000 to 1.969</b>		✂️ 3 m <b>9.843 ft</b>	
<b>FD-L45A</b>	—	10 to 33 <b>0.394 to 1.299</b> (Note 5)		✂️ 4 m <b>13.124 ft</b>	
<b>FD-L46</b>	16 to 30 <b>0.630 to 1.181</b>	12 to 50 <b>0.472 to 1.969</b>		✂️ 3 m <b>9.843 ft</b>	
<b>FD-L47</b>	28 <b>1.102</b>	30 <b>1.181</b>		P.105	
<b>FD-NFM2</b>	35 <b>1.378</b>	100 <b>3.937</b>		M4	P.105
<b>FD-NFM2S</b>	35 <b>1.378</b>	100 <b>3.937</b>	M4, Sleeve	✂️ 2 m <b>6.562 ft</b>	
<b>FD-NFM2S4</b>	35 <b>1.378</b>	100 <b>3.937</b>		P.105	
<b>FD-P2</b>	25 <b>0.984</b>	65 <b>2.559</b>	ø1.5 mm <b>ø0.059 in</b> , Flexible	✂️ 1 m <b>3.281 ft</b>	P.105
<b>FD-P40</b>	8 <b>0.315</b>	30 <b>1.181</b>	M3, Flexible	✂️ 2 m <b>6.562 ft</b>	P.105
<b>FD-P50</b>	45 <b>1.772</b>	150 <b>5.906</b>	ø3 mm <b>ø0.118 in</b> , Flexible		P.105
<b>FD-P60</b>	45 <b>1.772</b>	150 <b>5.906</b>	M4, Flexible	✂️ 1 m <b>3.281 ft</b>	P.105
<b>FD-P80</b>	90 <b>3.543</b>	200 <b>7.874</b>	M6, Flexible		P.106
<b>FD-P81X</b>	70 <b>2.756</b>	220 <b>8.661</b>	M6, Tough flexible	✂️ 2 m <b>6.562 ft</b>	P.106
<b>FD-R80</b>	70 <b>2.756</b>	180 <b>7.087</b>	M6, Elbow		P.106
<b>FD-S30</b>	45 <b>1.772</b>	155 <b>6.102</b>	Super quality, ø3 mm <b>ø0.118 in</b> , Flexible	✂️ 2 m <b>6.562 ft</b>	P.106
<b>FD-S31</b>	35 <b>1.378</b>	140 <b>5.512</b>	ø3 mm <b>ø0.118 in</b> , Flexible	✂️ 2 m <b>6.562 ft</b>	P.106

- Notes: 1) The standard sensing objects of the sensing ranges vary depending on the fibers.  
 2) Note that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.  
 3) The allowable cutting range is 700 mm **27.559 in** from the end that the amplifier inserted.  
 4) Sold as a set comprising vacuum type fiber + photo-terminal (**FV-BR1**) + fiber at atmospheric side (**FT-J8**).  
 5) The sensing range is changed due to tilt of sensing object.

**LIST OF FIBERS**

**Reflective type**



Fibers are listed in alphabetic order. Refer to p.5~ "Fiber Selection" for details of each fiber.

Model No.	Sensing range (mm in) (Note 1) (Note 2)		Type	Fiber cable length ✂: Free-cut	Dimensions	
	Standard type <b>FX-101</b> □	Long sensing range type <b>FX-102</b> □				
<b>FD-S80</b>	100 <b>3.937</b>	345 <b>13.583</b>	ø3 mm ø <b>0.118 in</b>	✂ 2 m <b>6.562 ft</b>	P.106	
<b>FD-SFM2SV2</b>	30 <b>1.181</b>	90 <b>3.543</b>	Side-view		P.106	
<b>FD-SNFM2</b>	35 <b>1.378</b>	100 <b>3.937</b>	ø2.5 mm ø <b>0.098 in</b>		P.106	
<b>FD-T40</b>	35 <b>1.378</b>	100 <b>3.937</b>	M3		P.106	
<b>FD-T80</b>	110 <b>4.331</b>	345 <b>13.583</b>	M4		P.106	
<b>FD-V41</b>	25 <b>0.984</b>	70 <b>2.756</b>	Side-view		P.106	
<b>FD-W8</b>	80 <b>3.150</b>	230 <b>9.055</b>	M6, Sharp bending		P.107	
<b>FD-W44</b>	15 <b>0.591</b>	40 <b>1.575</b>	M4, Sharp bending		P.107	
<b>FD-WG4</b>	28 <b>1.102</b>	75 <b>2.953</b>	M4, High precision		P.107	
<b>FD-WKZ1</b>	20 to 180 <b>0.787 to 7.087</b>	20 to 480 <b>0.787 to 18.898</b>	Long sensing range, Rectangular		P.107	
<b>FD-WL41</b>	7 to 12 <b>0.276 to 0.472</b> (Convergent point 8 <b>0.315</b> )	6 to 13.5 <b>0.236 to 0.531</b> (Convergent point 8 <b>0.315</b> )	Convergent reflective	✂ 1 m <b>3.281ft</b>	P.107	
<b>FD-WL48</b>	1 to 4.5 <b>0.039 to 0.177</b>	0.5 to 6.5 <b>0.020 to 0.256</b>			P.107	
<b>FD-WS8</b>	80 <b>3.150</b>	230 <b>9.055</b>	ø3 mm ø <b>0.118 in</b> , Sharp bending	✂ 2 m <b>6.562 ft</b>	P.107	
<b>FD-WSG4</b>	28 <b>1.102</b>	75 <b>2.953</b>	ø3 mm ø <b>0.118 in</b> , High precision		P.107	
<b>FD-WT4</b>	15 <b>0.591</b>	40 <b>1.575</b>	M3, Sharp bending		P.107	
<b>FD-WT8</b>	80 <b>3.150</b>	230 <b>9.055</b>	M4, Sharp bending		P.107	
<b>FD-WV42</b>	6 <b>0.236</b>	20 <b>0.787</b>	Side-view, Sharp bending		P.108	
<b>FD-WZ4</b>	2 to 20 <b>0.079 to 0.787</b>	1 to 70 <b>0.039 to 2.756</b>	Rectangular, Compact Sharp bending		✂ 1 m <b>3.281ft</b>	P.108
<b>FD-WZ4HB</b>	2 to 20 <b>0.079 to 0.787</b>	1 to 70 <b>0.039 to 2.756</b>			P.108	
<b>FD-WZ7</b>	1 to 55 <b>0.039 to 2.165</b>	160 <b>6.299</b>			✂ 2 m <b>6.562 ft</b>	P.108
<b>FD-WZ7HB</b>	1 to 60 <b>0.039 to 2.362</b>	0.5 to 180 <b>0.020 to 7.087</b>			P.108	

Notes: 1) The standard sensing objects of the sensing ranges vary depending on the fibers.  
 2) Note that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

**Sensing ranges (mm in) when using in combination with the FR-WKZ11 reflector (optional)**

Reflector \ Amplifier	<b>FX-101</b> □	<b>FX-102</b> □
<b>FR-WKZ11 + RF-210</b>	100 to 700 <b>3.937 to 27.559</b>	100 to 1,100 <b>3.937 to 43.307</b>
<b>FR-WKZ11 + RF-220</b>	100 to 1,300 <b>3.937 to 51.181</b>	100 to 2,600 <b>3.937 to 102.362</b>
<b>FR-WKZ11 + RF-230</b>	100 to 2,000 <b>3.937 to 78.740</b>	100 to 4,000 <b>3.937 to 157.480</b>

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Fibers

Amplifiers

**FX-500**

**FX-100**

**FX-300**

**FX-410**

**FX-311**




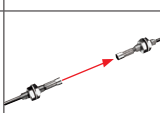
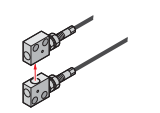
**FX-301-F7/**

**FX-301-F**

**FIBER OPTIONS**

- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC CONTROL DEVICES
- ENDOSCOPE
- LASER MARKERS
- PLC / TERMINALS
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS
- Selection Guide
- Fibers
- Amplifiers
- FX-500**
- FX-100**
- FX-300**
- FX-410**
- FX-311**
- FX-301-F7/ FX-301-F

**Lens (For thru-beam type fiber)**

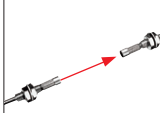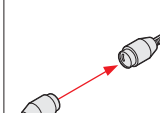Designation	Model No.	Description
For thru-beam type fiber	Expansion lens (Note 1)	<p><b>FX-LE1</b></p>  <p>Increases the sensing range by 5 times or more.</p> <ul style="list-style-type: none"> <li>Ambient temperature: -60 to +350 °C <b>-76 to +662 °F</b> (Note 4)</li> </ul>
	Super-expansion lens (Note 1)	<p><b>FX-LE2</b></p>  <p>Tremendously increases the sensing range with large diameter lenses.</p> <ul style="list-style-type: none"> <li>Ambient temperature: -60 to +350 °C <b>-76 to +662 °F</b> (Note 4)</li> </ul>
	Side-view lens	<p><b>FX-SV1</b></p>  <p>Beam axis is bent by 90°.</p> <ul style="list-style-type: none"> <li>Ambient temperature: -60 to +300 °C <b>-76 to +572 °F</b> (Note 4)</li> </ul>
	Expansion lens for vacuum-resistant fiber (Note 1)	<p><b>FV-LE1</b></p>  <p>Sensing range increases by 4 times or more.</p> <ul style="list-style-type: none"> <li>Ambient temperature: -60 to +350 °C <b>-76 to +662 °F</b> (Note 4)</li> </ul>
Side-view lens for vacuum-resistant fiber	<p><b>FV-SV2</b></p>  <p>Beam axis is bent by 90°.</p> <ul style="list-style-type: none"> <li>Ambient temperature: -60 to +300 °C <b>-76 to +572 °F</b> (Note 4)</li> </ul>	

Sensing range (mm in) [Lens on both sides]			
Fiber	Amplifier	FX-101□	FX-102□
<b>FT-B8</b>		2,200 <b>86.614</b>	3,500 <b>137.795</b> (Note 2)
<b>FT-FM2, FT-T80</b>		3,000 <b>118.110</b>	3,500 <b>137.795</b> (Note 2)
<b>FT-R80</b>		1,900 <b>74.803</b>	3,500 <b>137.795</b> (Note 2)
<b>FT-W8</b>		3,000 <b>118.110</b>	3,500 <b>137.795</b> (Note 2)
<b>FT-P80, FT-P60</b>		3,500 <b>137.795</b> (Note 2)	3,500 <b>137.795</b> (Note 2)
<b>FT-P81X</b>		1,600 <b>62.992</b> (Note 2)	1,600 <b>62.992</b> (Note 2)
<b>FT-H35-M2</b>		2,000 <b>78.740</b>	3,500 <b>137.795</b> (Note 2)
<b>FT-H20W-M1</b>		1,300 <b>51.181</b>	1,600 <b>62.992</b> (Note 2)
<b>FT-H20-M1</b>		1,600 <b>62.992</b> (Note 2)	1,600 <b>62.992</b> (Note 2)
<b>FT-H20-J20-S, FT-H20-J30-S, FT-H20-J50-S</b>		1,000 <b>39.370</b>	3,500 <b>137.795</b> (Note 2)

Sensing range (mm in) [Lens on both sides]			
Fiber	Amplifier	FX-101□	FX-102□
<b>FT-B8, FT-FM2, FT-R80, FT-W8, FT-P80, FT-P60</b>		3,500 <b>137.795</b> (Note 2)	3,500 <b>137.795</b> (Note 2)
<b>FT-P81X</b>		1,600 <b>62.992</b> (Note 2)	1,600 <b>62.992</b> (Note 2)
<b>FT-H35-M2</b>		3,500 <b>137.795</b> (Note 2)	3,500 <b>137.795</b> (Note 2)
<b>FT-H20W-M1, FT-H20-M1</b>		1,600 <b>62.992</b> (Note 2)	1,600 <b>62.992</b> (Note 2)
<b>FT-H13-FM2</b>		3,500 <b>137.795</b> (Note 2)	3,500 <b>137.795</b> (Note 2)
<b>FT-H20-J20-S, FT-H20-J30-S, FT-H20-J50-S</b>		3,500 <b>137.795</b> (Note 2)	3,500 <b>137.795</b> (Note 2)

Sensing range (mm in) [Lens on both sides]			
Fiber	Amplifier	FX-101□	FX-102□
<b>FT-B8</b>		530 <b>20.866</b>	1,450 <b>57.087</b>
<b>FT-FM2, FT-T80</b>		550 <b>21.654</b>	1,700 <b>66.929</b>
<b>FT-W8</b>		450 <b>17.717</b>	1,300 <b>51.181</b>
<b>FT-P80</b>		420 <b>16.535</b>	1,400 <b>55.118</b>
<b>FT-P60</b>		300 <b>11.811</b>	850 <b>33.465</b>
<b>FT-P81X</b>		550 <b>21.654</b>	1,700 <b>66.929</b>
<b>FT-H35-M2</b>		280 <b>11.024</b>	800 <b>31.496</b>
<b>FT-H20W-M1</b>		140 <b>5.512</b>	400 <b>15.748</b>
<b>FT-H20-M1</b>		280 <b>11.024</b>	840 <b>33.071</b>
<b>FT-H20-J20-S, FT-H20-J30-S, FT-H20-J50-S</b>		150 <b>5.906</b>	410 <b>16.142</b>

Sensing range (mm in) [Lens on both sides] (Note 3)			
Fiber	Amplifier	FX-101□	FX-102□
<b>FT-H30-M1V-S</b>		450 <b>17.717</b>	1,600 <b>62.992</b>


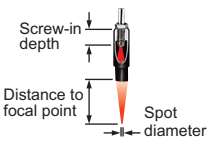
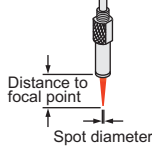
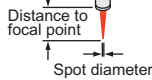
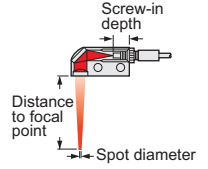
  

Sensing range (mm in) [Lens on both sides] (Note 3)			
Fiber	Amplifier	FX-101□	FX-102□
<b>FT-H30-M1V-S</b>		450 <b>17.717</b>	1,600 <b>62.992</b>

- Notes: 1) Be careful when installing the thru-beam type fiber equipped with the expansion lens, as the beam envelope becomes narrow and alignment is difficult. Especially when installing a fiber with many cores (sharp bending fibers and heat-resistant glass fiber), please be sure to use it only after you have adjusted it sufficiently.
- 2) The fiber cable length practically limits the sensing range to 3,500 mm **137.795 in** long (**FT-H20W-M1, FT-P81X** and **FT-H20-M1**: 1,600 mm **62.992 in**).
- 3) The fiber cable length for the **FT-H30-M1V-S** is 1 m **3.281 ft**. The sensing ranges in **FX-102□** (long sensing range type) take into account the length of the **FT-J8** atmospheric side fiber.
- 4) For details on the ambient temperatures for the fibers which being combined, refer to p.76~.

**FIBER OPTIONS**

**Lens (For reflective type fiber)**

Designation	Model No.	Description															
For reflective type fiber	Pinpoint spot lens	<b>FX-MR1</b>	 <p>Pinpoint spot of <math>\varnothing 0.5</math> mm <math>\varnothing 0.020</math> in. Enables detection of minute objects or small marks.                      • Distance to focal point: <math>6 \pm 1</math> mm <math>0.236 \pm 0.039</math> in • Applicable fibers: <b>FD-WG4, FD-G4</b>                      • Ambient temperature: <math>-40</math> to <math>+70</math> °C <math>-40</math> to <math>+158</math> °F (Note 2)</p>														
	Zoom lens	<b>FX-MR2</b>	 <p>The spot diameter is adjustable from <math>\varnothing 0.7</math> to <math>\varnothing 2</math> mm <math>\varnothing 0.028</math> to <math>\varnothing 0.079</math> in according to how much the fiber is screwed in.                      • Applicable fibers: <b>FD-WG4, FD-G4</b>                      • Ambient temperature: <math>-40</math> to <math>+70</math> °C <math>-40</math> to <math>+158</math> °F (Note 2)                      • Accessory: <b>MS-EX-3</b> (mounting bracket)</p> <table border="1"> <caption>Sensing range for FX-101□ (mm in) (Note 1)</caption> <thead> <tr> <th>Screw-in depth</th> <th>Distance to focal point</th> <th>Spot diameter</th> </tr> </thead> <tbody> <tr> <td>7 mm 0.276 in</td> <td>18.5 0.728 approx.</td> <td><math>\varnothing 0.7</math> <math>\varnothing 0.028</math></td> </tr> <tr> <td>12 mm 0.472 in</td> <td>27 1.063 approx.</td> <td><math>\varnothing 1.2</math> <math>\varnothing 0.047</math></td> </tr> <tr> <td>14 mm 0.551 in</td> <td>43 1.693 approx.</td> <td><math>\varnothing 2.0</math> <math>\varnothing 0.079</math></td> </tr> </tbody> </table>	Screw-in depth	Distance to focal point	Spot diameter	7 mm 0.276 in	18.5 0.728 approx.	$\varnothing 0.7$ $\varnothing 0.028$	12 mm 0.472 in	27 1.063 approx.	$\varnothing 1.2$ $\varnothing 0.047$	14 mm 0.551 in	43 1.693 approx.	$\varnothing 2.0$ $\varnothing 0.079$		
	Screw-in depth	Distance to focal point	Spot diameter														
	7 mm 0.276 in	18.5 0.728 approx.	$\varnothing 0.7$ $\varnothing 0.028$														
	12 mm 0.472 in	27 1.063 approx.	$\varnothing 1.2$ $\varnothing 0.047$														
14 mm 0.551 in	43 1.693 approx.	$\varnothing 2.0$ $\varnothing 0.079$															
Finest spot lens	<b>FX-MR3</b>	 <p>Extremely fine spot of <math>\varnothing 0.3</math> mm <math>\varnothing 0.012</math> in approx. achieved.                      • Applicable fibers: <b>FD-WG4, FD-G4, FD-EG1, FD-EG2, FD-EG3, FD-G6X, FD-G6</b>                      • Ambient temperature: <math>-40</math> to <math>+70</math> °C <math>-40</math> to <math>+158</math> °F (Note 2)</p> <table border="1"> <caption>Sensing range for FX-101□ (mm in) (Note 1)</caption> <thead> <tr> <th>Fiber model No.</th> <th>Distance to focal point</th> <th>Spot diameter</th> </tr> </thead> <tbody> <tr> <td><b>FD-EG3</b></td> <td><math>7.5 \pm 0.5</math> <math>0.295 \pm 0.020</math></td> <td><math>\varnothing 0.15</math> <math>\varnothing 0.006</math> approx.</td> </tr> <tr> <td><b>FD-EG2</b></td> <td><math>7.5 \pm 0.5</math> <math>0.295 \pm 0.020</math></td> <td><math>\varnothing 0.2</math> <math>\varnothing 0.008</math> approx.</td> </tr> <tr> <td><b>FD-EG1</b></td> <td><math>7.5 \pm 0.5</math> <math>0.295 \pm 0.020</math></td> <td><math>\varnothing 0.3</math> <math>\varnothing 0.012</math> approx.</td> </tr> <tr> <td><b>FD-WG4/G4, FD-G6X/G6</b></td> <td><math>7.5 \pm 0.5</math> <math>0.295 \pm 0.020</math></td> <td><math>\varnothing 0.5</math> <math>\varnothing 0.020</math> approx.</td> </tr> </tbody> </table>	Fiber model No.	Distance to focal point	Spot diameter	<b>FD-EG3</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.15$ $\varnothing 0.006$ approx.	<b>FD-EG2</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.2$ $\varnothing 0.008$ approx.	<b>FD-EG1</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.3$ $\varnothing 0.012$ approx.	<b>FD-WG4/G4, FD-G6X/G6</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.5$ $\varnothing 0.020$ approx.
Fiber model No.	Distance to focal point	Spot diameter															
<b>FD-EG3</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.15$ $\varnothing 0.006$ approx.															
<b>FD-EG2</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.2$ $\varnothing 0.008$ approx.															
<b>FD-EG1</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.3$ $\varnothing 0.012$ approx.															
<b>FD-WG4/G4, FD-G6X/G6</b>	$7.5 \pm 0.5$ $0.295 \pm 0.020$	$\varnothing 0.5$ $\varnothing 0.020$ approx.															
Finest spot lens	<b>FX-MR6</b>	 <p>Extremely fine spot of <math>\varnothing 0.1</math> mm <math>\varnothing 0.004</math> in approx. achieved.                      • Applicable fibers: <b>FD-WG4, FD-G4, FD-EG1, FD-EG2, FD-EG3, FD-G6X, FD-G6</b>                      • Ambient temperature: <math>-20</math> to <math>+60</math> °C <math>-4</math> to <math>+140</math> °F (Note 2)</p> <table border="1"> <caption>Sensing range for FX-101□ (mm in) (Note 1)</caption> <thead> <tr> <th>Fiber model No.</th> <th>Distance to focal point</th> <th>Spot diameter</th> </tr> </thead> <tbody> <tr> <td><b>FD-EG3</b></td> <td><math>7 \pm 0.5</math> <math>0.276 \pm 0.020</math></td> <td><math>\varnothing 0.1</math> <math>\varnothing 0.004</math> approx.</td> </tr> <tr> <td><b>FD-EG2</b></td> <td><math>7 \pm 0.5</math> <math>0.276 \pm 0.020</math></td> <td><math>\varnothing 0.15</math> <math>\varnothing 0.006</math> approx.</td> </tr> <tr> <td><b>FD-EG1</b></td> <td><math>7 \pm 0.5</math> <math>0.276 \pm 0.020</math></td> <td><math>\varnothing 0.2</math> <math>\varnothing 0.008</math> approx.</td> </tr> <tr> <td><b>FD-WG4/G4, FD-G6X/G6</b></td> <td><math>7 \pm 0.5</math> <math>0.276 \pm 0.020</math></td> <td><math>\varnothing 0.4</math> <math>\varnothing 0.016</math> approx.</td> </tr> </tbody> </table>	Fiber model No.	Distance to focal point	Spot diameter	<b>FD-EG3</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.1$ $\varnothing 0.004$ approx.	<b>FD-EG2</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.15$ $\varnothing 0.006$ approx.	<b>FD-EG1</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.2$ $\varnothing 0.008$ approx.	<b>FD-WG4/G4, FD-G6X/G6</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.4$ $\varnothing 0.016$ approx.
Fiber model No.	Distance to focal point	Spot diameter															
<b>FD-EG3</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.1$ $\varnothing 0.004$ approx.															
<b>FD-EG2</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.15$ $\varnothing 0.006$ approx.															
<b>FD-EG1</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.2$ $\varnothing 0.008$ approx.															
<b>FD-WG4/G4, FD-G6X/G6</b>	$7 \pm 0.5$ $0.276 \pm 0.020$	$\varnothing 0.4$ $\varnothing 0.016$ approx.															
Zoom lens (Side-view type)	<b>FX-MR5</b>	 <p><b>FX-MR2</b> is converted into a side-view type and can be mounted in a very small space.                      • Applicable fibers: <b>FD-WG4, FD-G4</b>                      • Ambient temperature: <math>-40</math> to <math>+70</math> °C <math>-40</math> to <math>+158</math> °F (Note 2)</p> <table border="1"> <caption>Sensing range for FX-101□ (mm in) (Note 1)</caption> <thead> <tr> <th>Screw-in depth</th> <th>Distance to focal point</th> <th>Spot diameter</th> </tr> </thead> <tbody> <tr> <td>8 mm 0.315 in</td> <td>13 0.512 approx.</td> <td><math>\varnothing 0.5</math> <math>\varnothing 0.020</math></td> </tr> <tr> <td>10 mm 0.394 in</td> <td>15 0.591 approx.</td> <td><math>\varnothing 0.8</math> <math>\varnothing 0.031</math></td> </tr> <tr> <td>14 mm 0.551 in</td> <td>30 1.181 approx.</td> <td><math>\varnothing 3.0</math> <math>\varnothing 0.118</math></td> </tr> </tbody> </table>	Screw-in depth	Distance to focal point	Spot diameter	8 mm 0.315 in	13 0.512 approx.	$\varnothing 0.5$ $\varnothing 0.020$	10 mm 0.394 in	15 0.591 approx.	$\varnothing 0.8$ $\varnothing 0.031$	14 mm 0.551 in	30 1.181 approx.	$\varnothing 3.0$ $\varnothing 0.118$			
Screw-in depth	Distance to focal point	Spot diameter															
8 mm 0.315 in	13 0.512 approx.	$\varnothing 0.5$ $\varnothing 0.020$															
10 mm 0.394 in	15 0.591 approx.	$\varnothing 0.8$ $\varnothing 0.031$															
14 mm 0.551 in	30 1.181 approx.	$\varnothing 3.0$ $\varnothing 0.118$															

Notes: 1) The sensing ranges are the values when used in combination with **FX-101□** (standard type). Please contact our office for details on sensing ranges for other types of amplifier.  
 2) For details on the ambient temperatures for the fibers which being combined, refer to p.76~.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Fibers

Amplifiers

**FX-500**

**FX-100**

**FX-300**

**FX-410**

**FX-311**

**FX-301-F7/ FX-301-F**

## SPECIFICATIONS

Item	Model No.	Type	Standard type		Long sensing range type	
			NPN output	Cable set	Cable set	Cable set
		NPN output	<b>FX-101(-Z)</b> (Note 5)	<b>FX-101-CC2</b>	<b>FX-102(-Z)</b> (Note 5)	<b>FX-102-CC2</b>
		PNP output	<b>FX-101P(-Z)</b> (Note 5)	<b>FX-101P-CC2</b>	<b>FX-102P(-Z)</b> (Note 5)	<b>FX-102P-CC2</b>
Supply voltage			12 to 24 V DC $\pm 10\%$ Ripple P-P 10% or less			
Power consumption			Normal operation: 720 mW or less (Current consumption 30 mA or less at 24 V supply voltage) ECO mode: 600 mW or less (Current consumption 25 mA or less at 24 V supply voltage)			
Output			<NPN output type> NPN open-collector transistor • Maximum sink current: 100 mA • Applied voltage: 30 V DC or less (between output and 0 V) • Residual voltage: 1.5 V or less (at 100 mA sink current)		<PNP output type> PNP open-collector transistor • Maximum source current: 100 mA • Applied voltage: 30 V DC or less (between output and +V) • Residual voltage: 1.5 V or less (at 100 mA source current)	
Output operation			Selectable either Light-ON or Dark-ON, at SET mode			
Short-circuit protection			Incorporated			
External input			<NPN output type> NPN non-contact input • Signal condition High: +8 V to +V DC or Open Low: 0 to +2 V DC (Source current 0.5 mA or less) • Input impedance: 10 k $\Omega$ approx.		<PNP output type> PNP non-contact input • Signal condition High: +4 V to +V DC (Sink current 0.5 to 3 mA) Low: 0 to +0.6 V DC or Open • Input impedance: 10 k $\Omega$ approx.	
Response time			Emission frequency 0: 250 $\mu$ s or less (factory default setting) Emission frequency 1: 450 $\mu$ s or less Emission frequency 2: 500 $\mu$ s or less Emission frequency 3: 600 $\mu$ s or less		Emission frequency 1: 2.5 ms or less (factory default setting) Emission frequency 2: 2.8 ms or less Emission frequency 3: 3.2 ms or less Emission frequency 4: 5.0 ms or less	
Sensitivity setting			2-point teaching / Limit teaching / Full-auto teaching			
Operation indicator			Orange LED (lights up when the output is ON)			
Digital display			4 digits (green) + 4 digits (red) LCD display			
Fine sensitivity adjustment function			Incorporated			
Timer function			ON-delay / OFF-delay timer, switchable either effective or ineffective [Timer period: 1 ms, 5 ms, 10 ms, 20 ms, 40 ms, 50 ms, 100 ms, 500 ms, 1,000 ms]			
Attenuation function			3-level + Auto setting			
Interference prevention function			Incorporated Emission frequency selection method (Note 2) (Functions at emission frequency 1, 2 or 3)		Incorporated Emission frequency selection method (Note 2) (Functions at emission frequency 1, 2, 3 or 4)	
Environmental resistance	Ambient temperature		-10 to +55 °C +14 to +131 °F (If 4 to 7 units are mounted close together: -10 to +50 °C +14 to +122 °F, if 8 to 16 units are mounted close together: -10 to +45 °C +14 to +113 °F) (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F			
	Ambient humidity		35 to 85 % RH, Storage: 35 to 85 % RH			
	Ambient illuminance		Incandescent light: 3,000 lx at the light-receiving face			
	Voltage withstandability		1,000 V AC for one min. between all supply terminals connected together and enclosure (Note 3)			
	Insulation resistance		20 M $\Omega$ , or more, with 250 V DC megger between all supply terminals connected together and enclosure (Note 3)			
	Vibration resistance		10 to 150 Hz frequency, 0.75 mm 0.030 in amplitude in X, Y and Z directions for two hours each			
Shock resistance			98 m/s <sup>2</sup> acceleration (10 G approx.) in X, Y and Z directions for five times each			
Emitting element (modulated)			Red LED (Peak emission wavelength: 632 nm 0.025 mil)			
Material			Enclosure: Polycarbonate, Key switch: Polycarbonate, Fiber lock lever: PBT			
Connecting method			Connector (Note 4)			
Cable length			Total length up to 100 m 328.084 ft is possible with 0.3 mm <sup>2</sup> , or more, cable.			
Weight			Net weight: 15 g approx. Gross weight: 35 g approx.	Net weight: 15 g approx. Gross weight: 75 g approx.	Net weight: 15 g approx. Gross weight: 35 g approx.	Net weight: 15 g approx. Gross weight: 75 g approx.
Accessory			—————	<b>CN-14A-C2</b> (Connector attached cable, 2 m 6.562 ft long): 1pc.	—————	<b>CN-14A-C2</b> (Connector attached cable, 2 m 6.562 ft long): 1pc.

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C +73.4 °F.

2) When using the interference prevention function, set the emission frequencies for the amplifiers to be covered by the interference prevention function to different frequency values.

However, the interference prevention function does not operate at emission frequency 0 (factory default setting) for the **FX-101(P)(-Z)** / **FX-101(P)-CC2**.

3) The voltage withstandability and the insulation resistance values given in the above table are for the amplifier only.

4) Connector attached cable **CN-14A-C2** is not attached to the models that have no "-CC2" at the end of the model Nos.

Make sure to use the optional connector attached cable **CN-14A(-R)-C□** or the connector **CN-14A**, or a connector manufactured by J.S.T. Mfg., Ltd.

(contact: SPHD-001T-P0.5, housing: PAP-04V-S).


5) Model Nos. having the suffix "-Z" are M8 plug-in connector type. Make sure to use the optional M8 attached connector cable **CN-24A-C□**.

**I/O CIRCUIT AND WIRING DIAGRAMS**

**FX-10□(-Z/-CC2)**


NPN output type

**I/O circuit diagram**

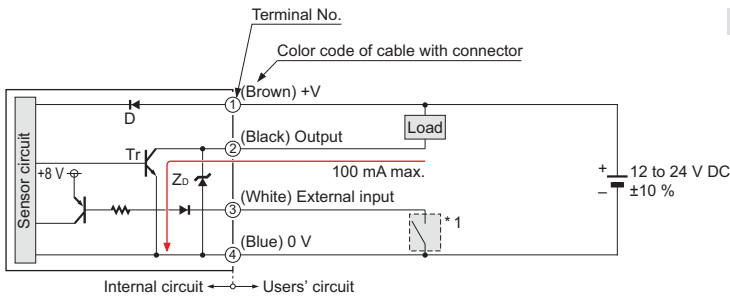


**Terminal arrangement diagram**

**Connector type**

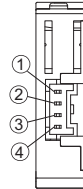

Terminal No.	Function
①	+V
②	Output
③	External input
④	0 V

**M8 plug-in connector type**

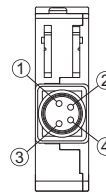


Terminal No.	Function
①	+V
②	Output
③	External input
④	0 V

Symbols ... D : Reverse supply polarity protection diode  
 Zd: Surge absorption zener diode  
 Tr: NPN output transistor

\* 1

Non-voltage contact or NPN open-collector transistor

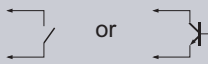


High (+8 V to +V DC, or open): Ineffective  
 Low ([0 to +2 V DC (source current 0.5 mA or less)]: Effective

**FX-10□P(-Z/-CC2)**


PNP output type

**I/O circuit diagram**

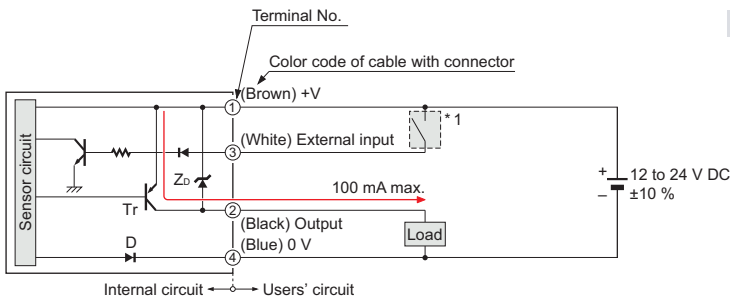


**Terminal arrangement diagram**

**Connector type**

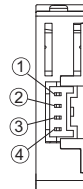

Terminal No.	Function
①	+V
②	Output
③	External input
④	0 V

**M8 plug-in connector type**

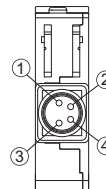


Terminal No.	Function
①	+V
②	Output
③	External input
④	0 V

Symbols ... D : Reverse supply polarity protection diode  
 Zd: Surge absorption zener diode  
 Tr: PNP output transistor

\* 1

Non-voltage contact or PNP open-collector transistor

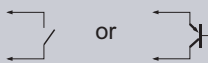

High [+4 V to +V DC (sink current 0.5 to 3 mA)]: Effective  
 Low (0 to +0.6 V DC, or open): Ineffective

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

ENDSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Fibers

Amplifiers

**FX-500**

**FX-100**

**FX-300**

**FX-410**

**FX-311**

**FX-301-F7/**



**FX-301-F**

**SENSING CHARACTERISTICS (TYPICAL)**


Contact our office for sensing characteristics that are not contained here.

FIBER SENSORS  
LASER SENSORS  
PHOTO-ELECTRIC SENSORS  
MICRO PHOTO-ELECTRIC SENSORS  
AREA SENSORS  
LIGHT CURTAINS  
PRESSURE / FLOW SENSORS  
INDUCTIVE PROXIMITY SENSORS  
PARTICULAR USE SENSORS  
SENSOR OPTIONS  
SIMPLE WIRE-SAVING UNITS  
WIRE-SAVING SYSTEMS  
MEASUREMENT SENSORS  
STATIC CONTROL DEVICES  
ENDOSCOPE  
LASER MARKERS  
PLC / TERMINALS  
HUMAN MACHINE INTERFACES  
ENERGY CONSUMPTION VISUALIZATION COMPONENTS  
FA COMPONENTS  
MACHINE VISION SYSTEMS  
UV CURING SYSTEMS  
Selection Guide  
Fibers  
Amplifiers  
**FX-500**  
**FX-100**  
**FX-300**  
**FX-410**  
**FX-311**  
**FX-301-F7 / FX-301-F**


**FT-A8** Thru-beam type

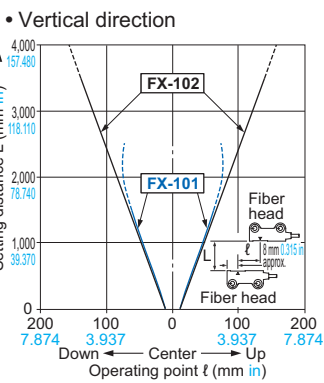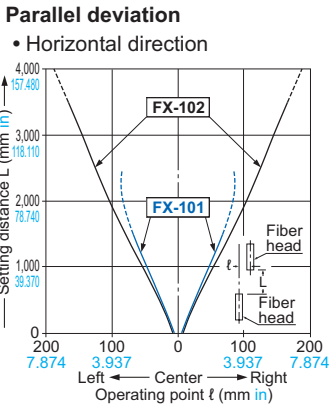


**FT-B8** Thru-beam type

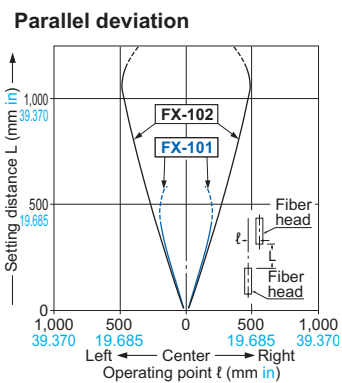


**FT-FM2 FT-FM2S FT-FM2S4 FT-SFM2 FT-T80** Thru-beam type

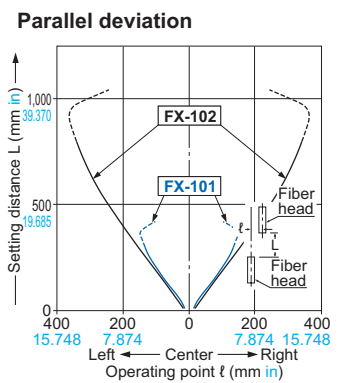


**FT-NFM2 FT-NFM2S FT-NFM2S4 FT-SNFM2** Thru-beam type

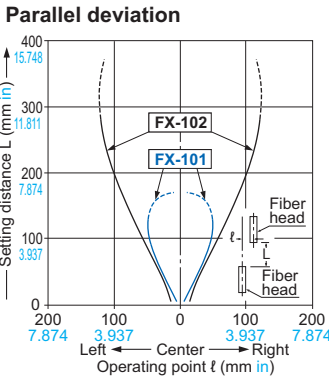


**FT-P81X** Thru-beam type

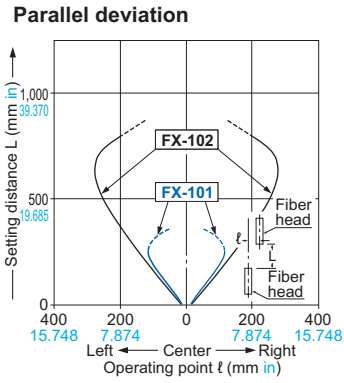


**FT-W4 FT-WS4** Thru-beam type

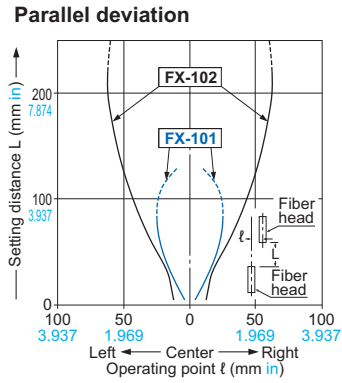


**FT-W8 FT-WS8** Thru-beam type

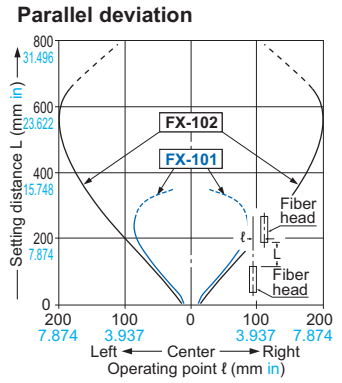


**FD-B8** Reflective type

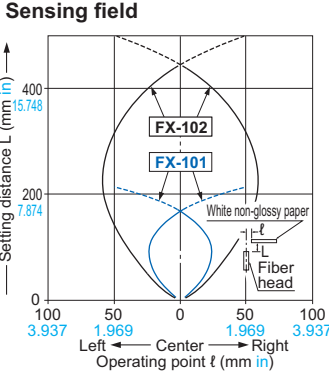


**FD-FM2** Reflective type

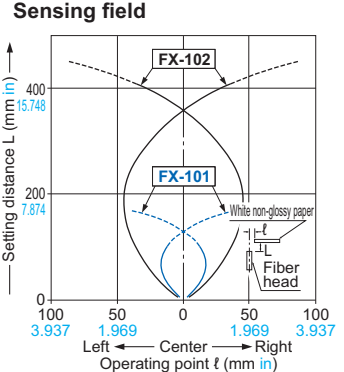


**FD-G4** Reflective type

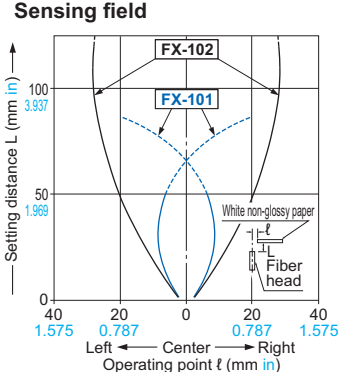


**FD-G6X** Reflective type

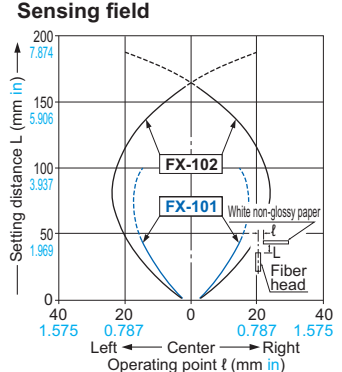


**FD-NFM2 FD-NFM2S FD-NFM2S4 FD-SNFM2 FD-T40** Reflective type

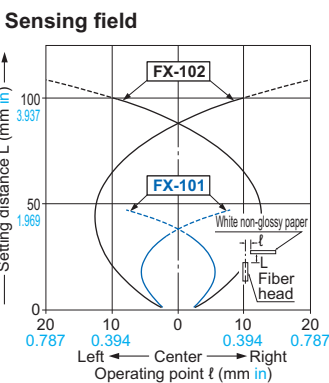


**FD-P81X** Reflective type

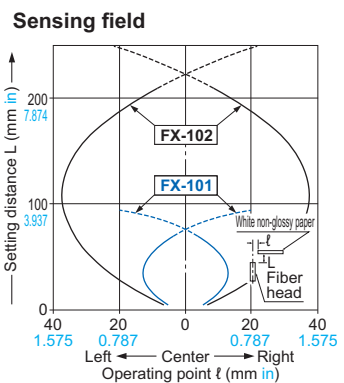

**FD-W8 FD-WS8 FD-WT8** Reflective type

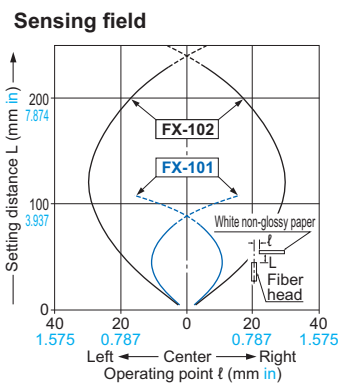

**FD-WG4 FD-WSG4** Reflective type

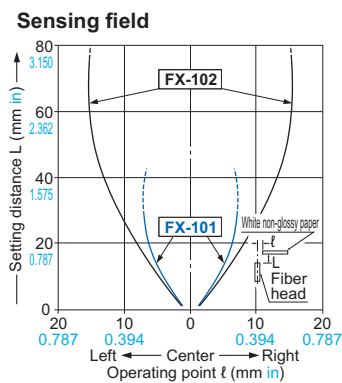

## PRECAUTIONS FOR PROPER USE



- Never use this product as a sensing device for personnel protection.
- In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

### Using in combination with the FX-300 / FX-410 series


- The **FX-100** series does not use the horizontal connectors that are used with the **FX-300 / FX-410** series. Please note that horizontal connection cannot be performed using a connector attached cable. In addition, the optical communication function is not equipped on the **FX-100** series, so it is unable to perform interference prevention for use with the **FX-300 / FX-410** series. If using the **FX-100** series together with the **FX-300 / FX-410** series side-by-side, please set the same models together in groups.

### Mounting

<When using a DIN rail>


#### How to mount the amplifier

- ① Fit the rear part of the mounting section of the amplifier on a 35 mm **1.378 in** width DIN rail.
- ② Press down the rear part of the mounting section of the unit on the 35 mm **1.378 in** width DIN rail and fit the front part of the mounting section to the DIN rail.

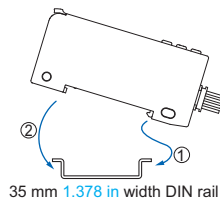

#### How to remove the amplifier


- ① Push the amplifier forward.
- ② Lift up the front part of the amplifier to remove it.

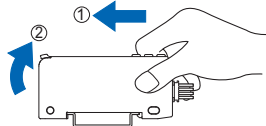

Note: Take care that if the front part is lifted without pushing the amplifier forward, the hook on the rear portion of the mounting section is likely to break.

<When using screws with washers>

- Use M3 screws with washers for mounting. The tightening torque should be 0.5 N·m or less.

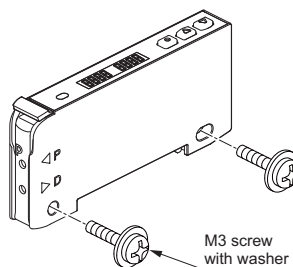


Refer to General precautions, and to the "Operation Guide" on our website for details pertaining to operating instructions for the amplifier.

### Wiring

- Make sure that the power supply is OFF while adding or removing the amplifiers.
- Note that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the product may get burnt or damaged.
- Note that short-circuit of the load or wrong wiring may burn or damage the product.
- Do not run the wires together with high-voltage lines or power lines, or put them in the same raceway. This can cause malfunction due to induction.
- Verify that the supply voltage variation is within the rating.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Make sure to use the quick-connection cable (optional) for the connection of the controller. Extension up to total 100 m **328.084 ft** is possible with 0.3 mm<sup>2</sup> or more, cable. However, in order to reduce noise, make the wiring as short as possible.

### Part description

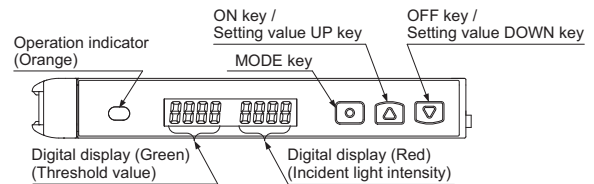

### Setting mode

- Setting mode appears after the MODE key is pressed for 2 sec. in RUN mode.

Setting item	Factory setting	Description
Teaching mode	LEACH	Threshold value can be set in 2-point teaching, limit teaching, or full-auto teaching.
Output operation setting	L_d d_on [Dark-ON]	Light-ON or Dark-ON can be set.
Timer operation setting	dELY non [Without timer]	Without timer, ON delay timer, or OFF delay timer can be set.
Timer setting	ond 10 [ON-delay timer: 10 ms] ofd 10 [OFF-delay timer: 10 ms]	In case of setting ON-delay timer or OFF-delay timer in the timer operation setting mode, timer can be set. When timer is not set, this mode is not displayed.
Emission amount setting	PctL 1111 Level 3	Setting for reduced intensity of emission amount is possible when the incident light intensity is saturated.
Emission frequency setting	FX-101□ FrEQ F-0 [0 (Response time: 250 μs or less)] FX-102□ FrEQ F-01 [1 (Response time: 2.5 ms or less)]	In case of using the fiber heads in parallel, interference can be prevented by setting different emission frequency. However, when emission frequency 0 is set, interference cannot be prevented. Response time corresponds to emission frequency.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

SELECTION GUIDE

FIBERS

AMPLIFIERS

FX-500

FX-100

FX-300

FX-410

FX-311

FX-301-F7 / FX-301-F



## PRECAUTIONS FOR PROPER USE

### PRO mode

- PRO mode appears after the MODE key is pressed for 4 sec. in RUN mode.

Setting item	Factory setting	Description
Shift setting	[Shift amount 15%]	Shift amount can be selected from 0 to 80 % in the limit teaching. Select 0 % when it is desired to set the present incident light intensity as a threshold value.
External input setting	[Emission halt]	External input can be selected from emission halt, limit teaching [+], limit teaching [-], full-auto teaching, ECO (Note 1), 2-point teaching or emission amount test. When setting the incident light intensity test "EES", output turns ON / OFF every 100ms when the rate of incident light intensity and threshold value is less than half of the set shift amount (for example, when the rate of incident light intensity and threshold value is within ±10 % for 20 % of shift amount) at external input.
Threshold value-storing setting mode (Note 2)	[OFF]	Threshold value set at the limit teaching, full-auto teaching or 2-point teaching by external input is stored. When selecting Auto in the emission amount setting mode, the set emission amount level is also stored.
Threshold value follow-up cycle setting (Note 3)	[OFF]	When incident light intensity exceeds threshold value, this mode can change the threshold value with each set cycle depending on variations of the incident light intensity. The follow-up shift amount is same as the one set in the shift setting mode. However, the threshold value is not stored.
GETA function setting (Note 4, 5)	[OFF]	Variations can be reduced by correcting the present incident light intensity in each amplifier to a target value. Target value to offset incident light intensity can be selected from 0 to 2,000 by 100 unit each. For example, if the target value is set to 2,000 when the incident light intensity is 1,500, the incident light intensity becomes 2,000.
ECO setting	[OFF]	It is possible to light up / turn off the digital display. When ECO setting mode is ON, the display turns off in 20 sec. approx. in RUN mode. To light up the display again, press any key for 2 sec. or more.
Digital display inversion setting	[OFF]	Digital display can be inverted.
Threshold value margin setting	[OFF]	Margin for threshold value to the present incident light intensity can be checked. When there is no margin, it is possible to make the digital display blink. OFF : Set to "OFF": does not function. GRN : Green blinks. RED : Red blinks. RL : Red and green blink. In-E : When conducting limit teaching or 2-point teaching by external input, in case the rate of reference incident light intensity and threshold value after teaching is 200% or more, or in case it is less than half of the shift amount, output turns ON / OFF every 100 ms. (Note 6)
Setting copy	[NO]	The settings of the master side amplifier can be copied to the slave side amplifier. For details, refer to "Setting copy function".
Reset	[NO]	Returns to default settings (factory settings.)

- Notes: 1) When ECO is selected at the external input setting mode, key operation on the main body is invalid during external input.  
 2) This mode is not indicated unless any of "LtcP", "Ltc-", "Ruto" or "2-Pt" is set at the external input setting mode.  
 3) If the incident light intensity becomes "300" or less, the follow-up operation stops. In that condition, threshold value [digital display (green)] blinks. This function can be used when thru-beam type or retroreflective type fiber is applied to this product. If reflective type fiber is applied, the function cannot be used depending on use conditions.  
 4) If MODE key is pressed in RUN mode when GETA function is used, the incident light intensity before setting GETA function is displayed on the red digital display for 2 sec. approx.  
 5) When GETA function is used in saturation of incident light intensity (4,000 or more), "HRRd" is indicated on the red digital display. Correction value is up to 4,000.  
 6) This mode does not operate unless any of "LtcP", "Ltc-" or "2-Pt" is set at the external input setting mode.

Refer to General precautions, and to the "Operation Guide" on our website for details pertaining to operating instructions for the amplifier.

### Setting copy function

- This can copy the settings of the master side amplifier to the slave side amplifier.  
 Refer to the copy unit **SC-SU1** for details.

- Be sure to use the setting copy function between the identical models (Between **FX-101** models or **FX-102** models). This function cannot be used between different models.
- Only one sensor can be connected on slave side with a master side sensor for the setting copy function.
- Threshold value, output operation setting, timer operation setting, timer setting, light-emitting amount setting, shift setting, external input setting, threshold value margin setting, ECO setting, digital display inversion setting, and threshold value margin setting can be copied.

### <Setting procedures>

- ① Set the setting copy mode of the master side amplifier to "Copy sending ON", and press the MODE key so that "COPY" is shown on the digital display and the sensor is in copy ready state. For the setting method, refer to "Operation guide".
  - ② Turn off the master side amplifier.
  - ③ Connect the master side amplifier with the slave side amplifier as shown below.
- 
- ④ Turn on the master side amplifier and the slave side amplifier at the same time. (Note)
  - ⑤ "COPY" is shown on the green digital display of the master side amplifier and 4-digit code is shown on the red digital display of it, then the copying starts. During copy communication, "COPY" is shown on the green digital display of the slave side amplifier, and the ongoing copy communication indicator ("1" → "11" → "111" → "1111" → "11111" → "111111" → "1111111" → "11111111") is displayed on the red digital display.
  - ⑥ When the copying is completed, "Good" is shown on the green digital display of the slave side amplifier, while the 4-digit code (the same code as the master side amplifier) is shown on the red digital display of it.
  - ⑦ Turn off the power of the master side amplifier and the slave side amplifier and disconnect the wire.

\* If copying the settings to another amplifier repeatedly, follow the steps ③ to ⑦.

Note: Take care that if the power is not turned on at the same time, the setting contents may not be copied.

### <To cancel the setting copy mode of the master side amplifier>

- ① While the slave side amplifier is disconnected, turn on the power of the master side amplifier.
- ② Press the MODE key for 2 sec. approx.

**PRECAUTIONS FOR PROPER USE**

**Others**

- Do not use during the initial transient time (0.5 sec.) after the power supply is switched on.
- Take care that the product is not directly exposed to fluorescent lamp from a rapid-starter lamp, a high frequency lighting device or sunlight etc., as it may affect the sensing performance.
- This product is suitable for indoor use only.
- Avoid dust, dirt, and steam.
- Take care that the product does not come in contact with oil, grease, organic solvents, such as thinner, etc., strong acid or alkaline.
- This product cannot be used in an environment containing inflammable or explosive gases.
- Never disassemble or modify this product.
- EEPROM is adopted to this product. It is not possible to conduct teaching 100 thousand times or more, because of the EEPROM's lifetime.

**Quick setting function**

- The quick setting function makes it possible to set the content of the SET Mode (output operation, timer operation, amount of light emitted, and frequency of light emitted) simply by selecting a setting number.
- While in the RUN Mode, pressing and holding both the ON key (⏻) and OFF key (⏹) simultaneously for 2 seconds will switch to the quick setting function.

**<Table of quick setting numbers>**


No.	Output operation	Timer	Emission amount setting
-00-	D-ON	non	Level 3 (OFF)
-01-	D-ON	non	Level 2 (ON)
-02-	D-ON	ofd 10 ms	Level 3 (OFF)
-03-	D-ON	ofd 10 ms	Level 2 (ON)
-04-	D-ON	ofd 40 ms	Level 3 (OFF)
-05-	D-ON	ofd 40 ms	Level 2 (ON)
-06-	D-ON	ond 10 ms	Level 3 (OFF)
-07-	D-ON	ond 10 ms	Level 2 (ON)
-08-	D-ON	ond 40 ms	Level 3 (OFF)
-09-	D-ON	ond 40 ms	Level 2 (ON)
-10-	L-ON	ond 40 ms	Level 2 (ON)
-11-	L-ON	ond 40 ms	Level 3 (OFF)
-12-	L-ON	ond 10 ms	Level 2 (ON)
-13-	L-ON	ond 10 ms	Level 3 (OFF)
-14-	L-ON	ofd 40 ms	Level 2 (ON)
-15-	L-ON	ofd 40 ms	Level 3 (OFF)
-16-	L-ON	ofd 10 ms	Level 2 (ON)
-17-	L-ON	ofd 10 ms	Level 3 (OFF)
-18-	L-ON	non	Level 2 (ON)
-19-	L-ON	non	Level 3 (OFF)

Refer to General precautions, and to the "Operation Guide" on our website for details pertaining to operating instructions for the amplifier.

**Code setting function**

- The code setting function makes it possible to set the output operation, timer operation, amount of light emitted, frequency of light emitted, ECO setting, external input, and amount of shift by selecting a code of one's choice.
- While in the RUN Mode, pressing and holding both the ON key (⏻) and OFF key (⏹) simultaneously for 4 seconds will switch to the code setting function.

**<Code table>**



Code	1st digit		2nd digit		ECO	3rd digit	4th digit	
	Output operation	Timer (Note 1)	Emission frequency					
			FX-101□	FX-102□				
0	D-ON	non	Level 3 (OFF)	0	OFF	Emission halt	5 %	
1		ond 10 ms		1		2	Limit teaching [+]	10 %
2		ond 40 ms		2		3	Limit teaching [-]	15 %
3		ofd 10 ms		3		4	Full-auto teaching	20 %
4	L-ON	ofd 40 ms	Level 2 (ON)	0	ON	ECO	25 %	
5		non		1		2	Emission halt	30 %
6		ond 10 ms		2		3	Limit teaching [+]	35 %
7		ond 40 ms		3		4	Limit teaching [-]	40 %
8	Auto	ofd 10 ms	Level 1	0	OFF	Full-auto teaching	45 %	
9		ofd 40 ms		1		2	ECO	50 %
A		Level 3 (OFF)		2		3	2-point teaching	Incident light intensity test
B				3		4		
C	Auto	Level 2 (ON)	Level 1	0	ON	2-point teaching	Incident light intensity test	
D				1		2		
E				2		3		
F				3		4		

Notes: 1) When the present setting is out of the code setting range, "-" is shown. When "-" is selected, the set content of the digit is not changed.  
 2) The factory setting is "0002".

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

ENDOSCOPE

LASER MARKERS

PLC / TERMINALS

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Fibers

Amplifiers

**FX-500**

**FX-100**

**FX-300**

**FX-410**

**FX-311**


**FX-301-F7/ FX-301-F**

**DIMENSIONS (Unit: mm in)**




The CAD data in the dimensions can be downloaded from our website.

- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC CONTROL DEVICES
- ENDOSCOPE
- LASER MARKERS
- PLC / TERMINALS
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS
- Selection Guide
- Fibers
- Amplifiers
- FX-500
- FX-100
- FX-300
- FX-410
- FX-311
- FX-301-F7 / FX-301-F


**FX-101□ FX-102□** Amplifier

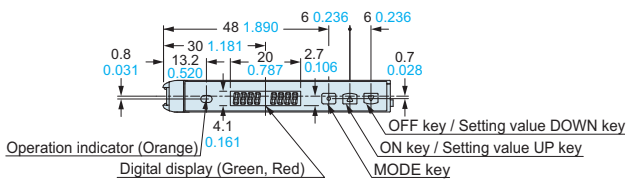

**FX-101(P)-Z FX-102(P)-Z** Amplifier

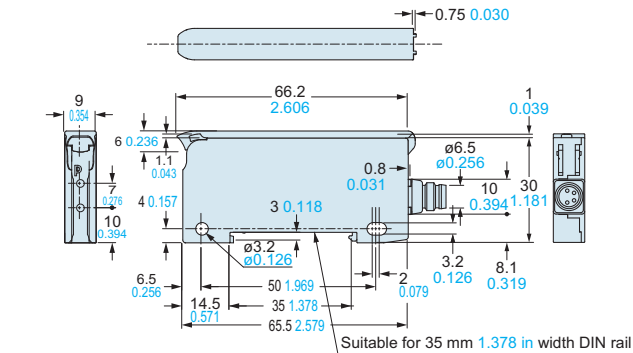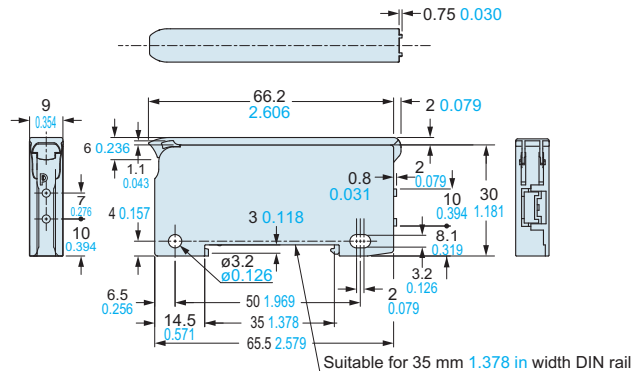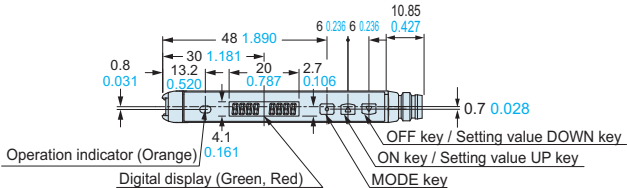


**MS-DIN-4** Amplifier mounting bracket (Optional)

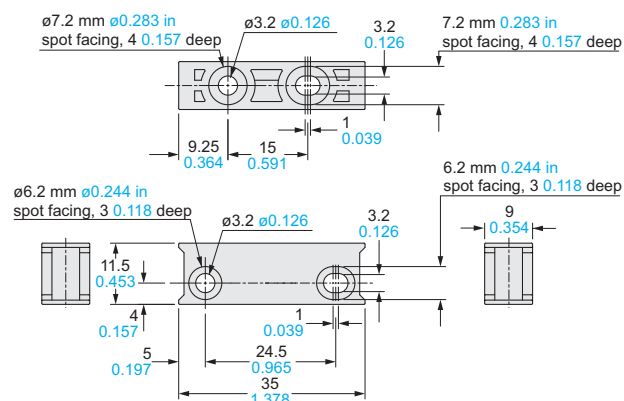


Material: PBT

**MS-DIN-E** End plate (Optional)

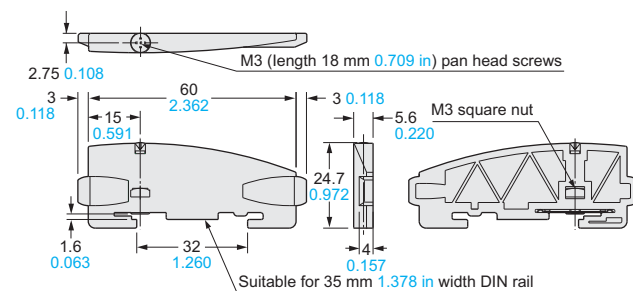

Material: Polycarbonate

**CN-14A-C□ CN-14A-R-C□** Connector attached cable (Optional)

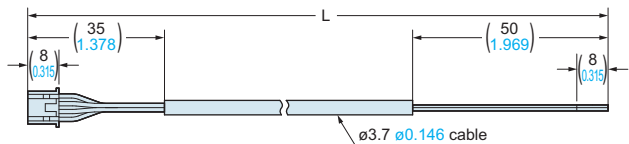

CN-14A-C2 is attached FX-101(P)-CC2 / FX-102(P)-CC2

• Length L

Model No.	Length L
CN-14A(-R)-C1	1,000 39.370
CN-14A(-R)-C2	2,000 78.740
CN-14A(-R)-C3	3,000 118.110
CN-14A(-R)-C5	5,000 196.850

